


ИНСТРУКЦИЯ ПО СБОРКЕ

БРИСБЕН кровать

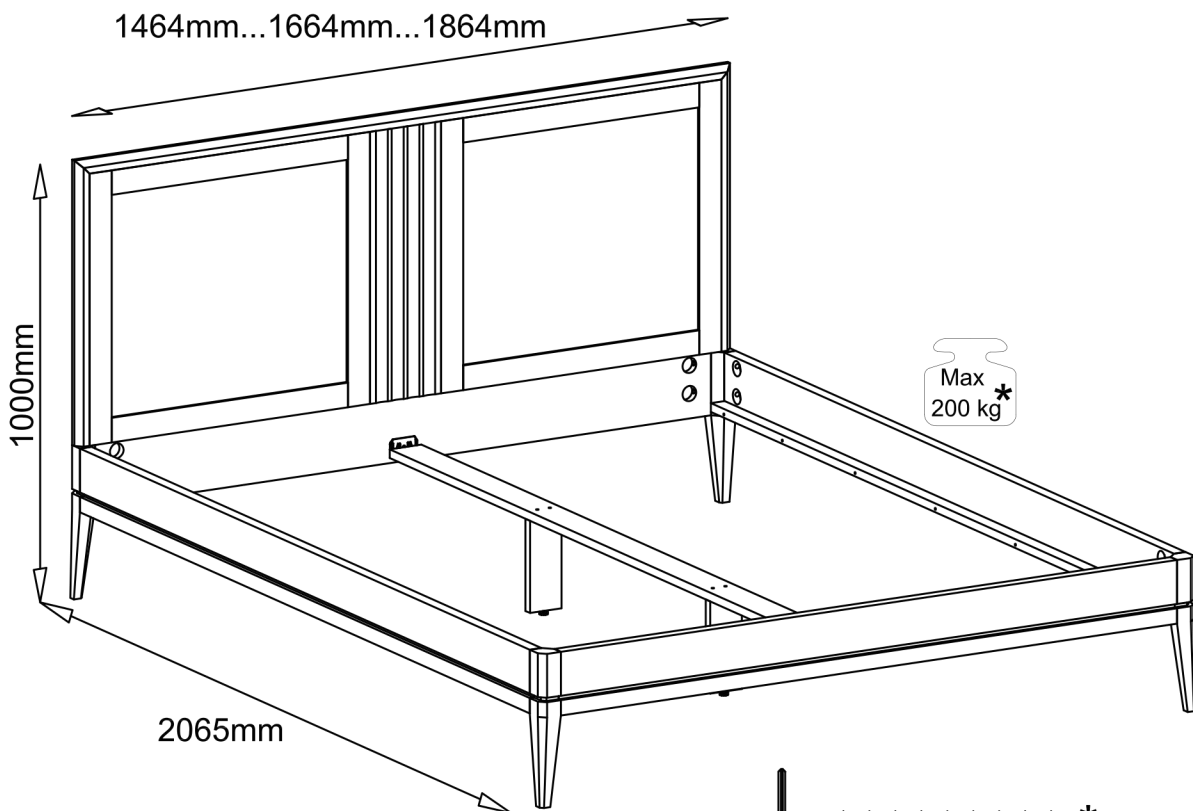

(ES) Instrucciones de montaje

(D) Montageanleitung

(FR) Notice de montage

(NL) Handleiding voor de montage

(CZ) Montážní návod

(HU) Szerelési útmutató

(TR) Montaj talimatları

(GB) Assembly instructions


(IT) Istruzioni di montaggio

(PL) Instrukcja montażu



(SK) Návod na montáž


(RO) Instrucțiuni de montaj

(RU) Инструкция по монтажу


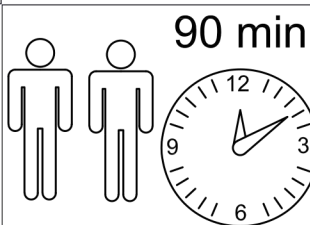





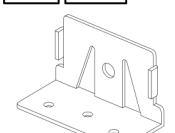
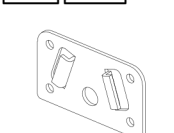



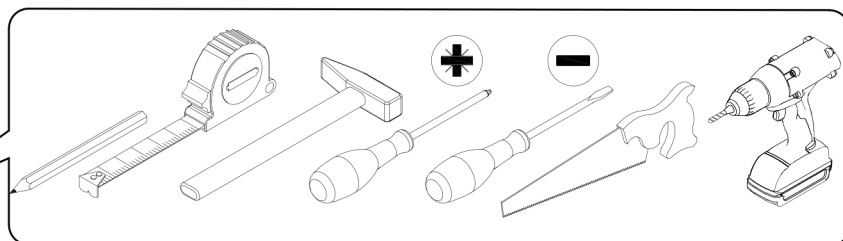


90 min

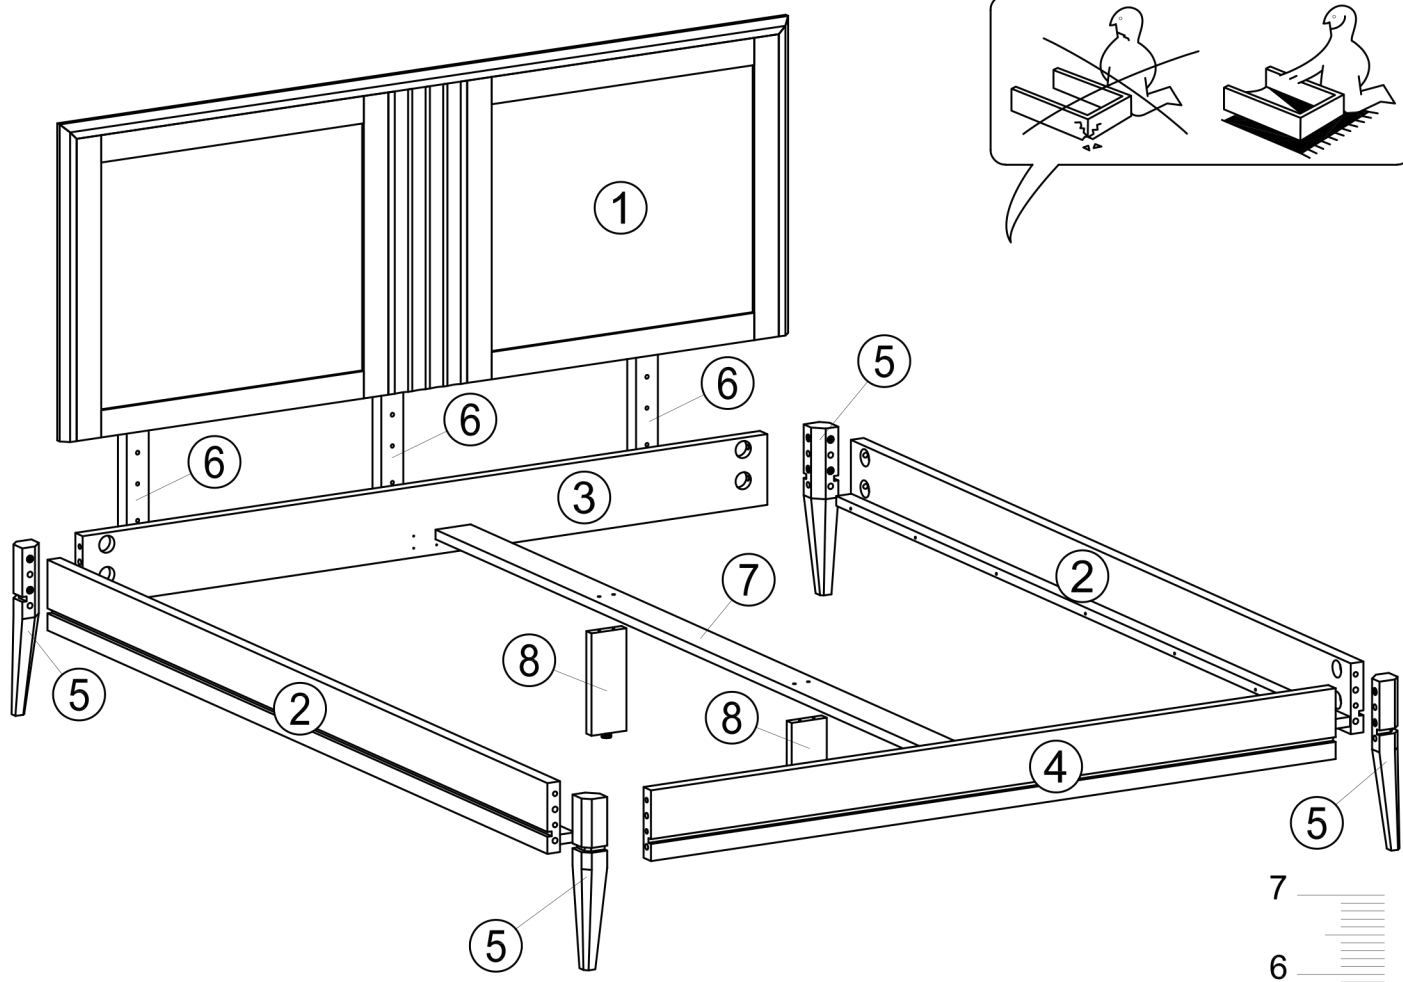








№	Size/MaB			Qty	✓
	1400	1600	1800		
1	1464x650x40	1664x650x40	1864x650x40	1	
2	1975x145x65			2	
3	1362x145x30	1562x145x30	1762x145x30	1	
4	1362x145x30	1562x145x30	1762x145x30	1	
5	350x50x50			4	
6	500x50x35			3	
7	1993x80x20			1	
8	210(+10)x80x20			2	


A1 x4  Ø7x50	B3 x16  Ø9x58 M8x9.5	C3 x16  Ø35x15	K1 x9  Ø8x35	K2 x16  Ø12x60	J2 x14  4x16	O1 x1  k4 mm
P2 x2 	P3 x2 	H3 x12  Ø6x35	E2 x12  M6	O2 x1  k6 mm	O3 x1  k5 mm	



1

C3 x16	J2 x8	P3 x2	K2 x16
			
Ø35x15	4x16		Ø12x60

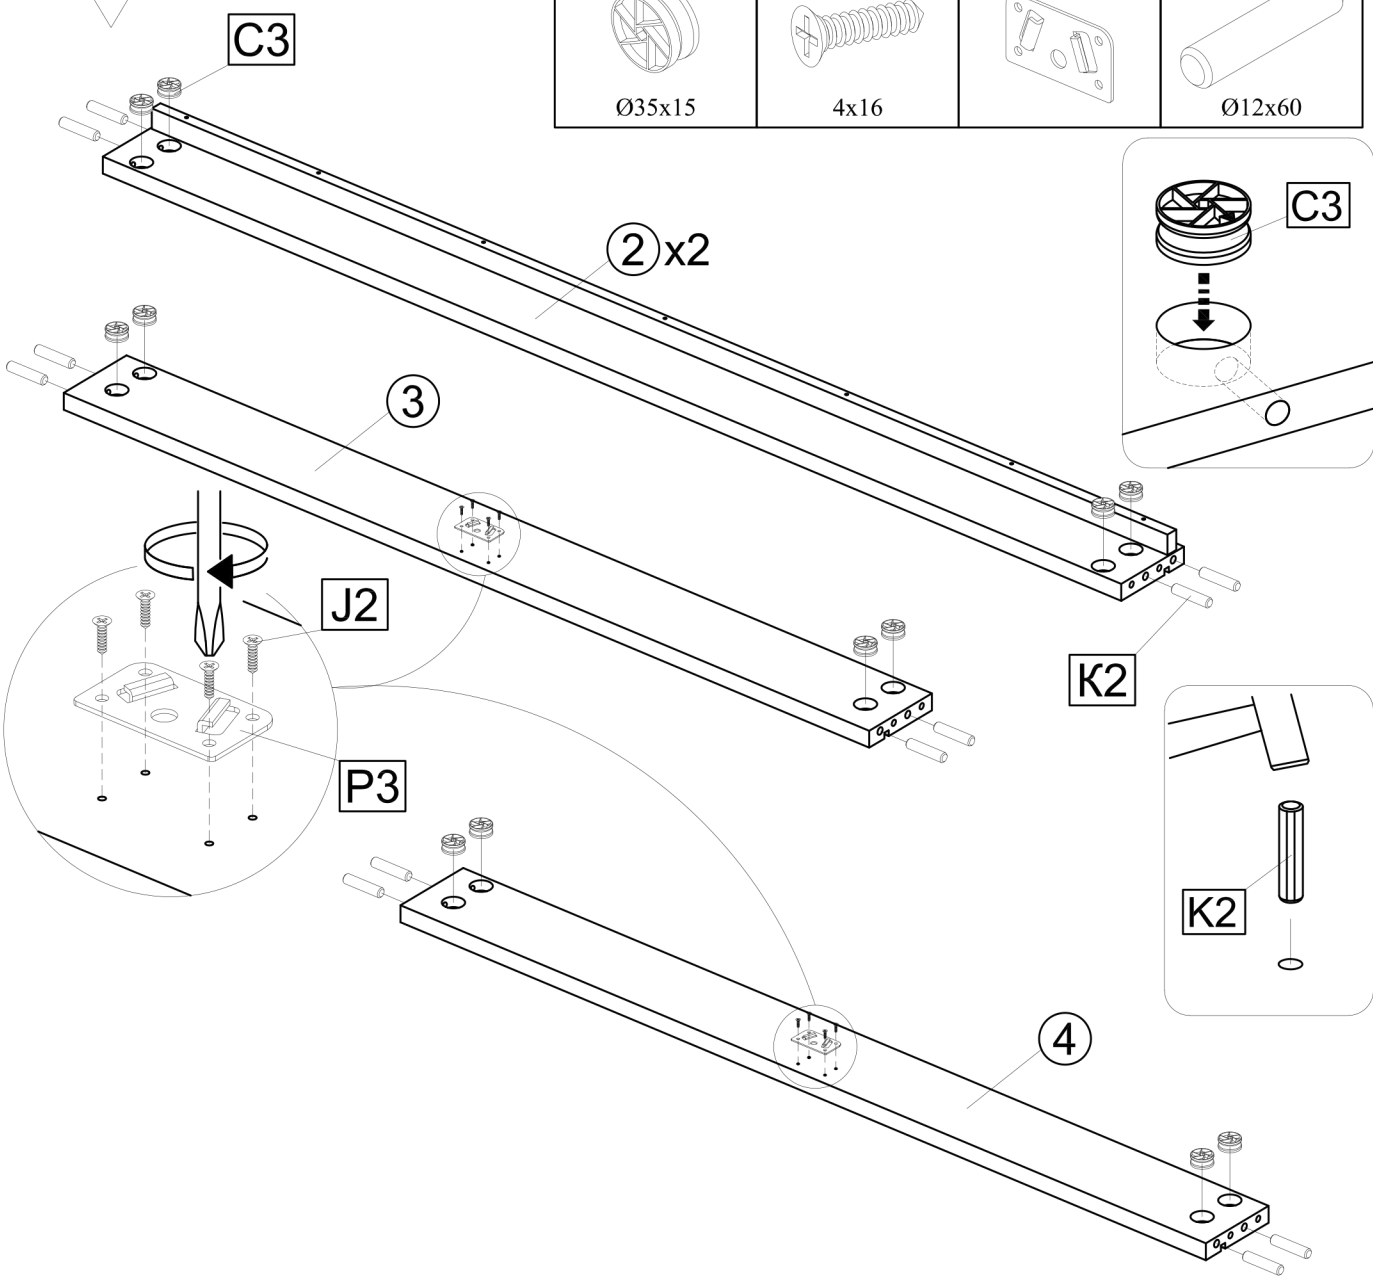

2

B3 x16

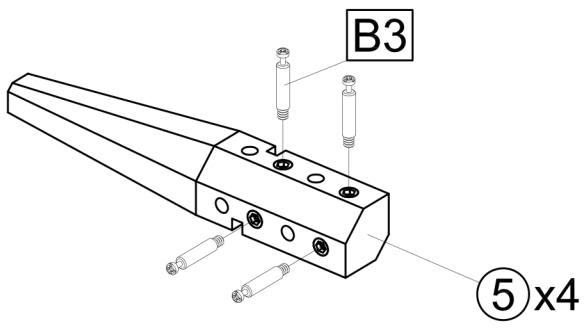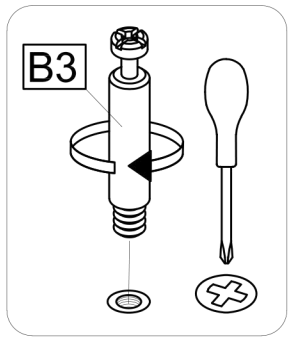Ø9x58 M8x9.5







3

O2 x1




k6 mm

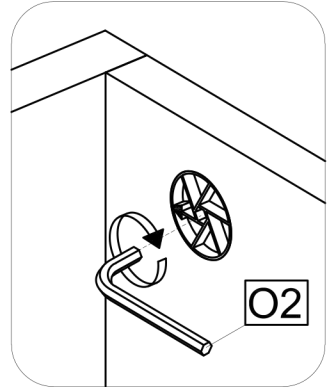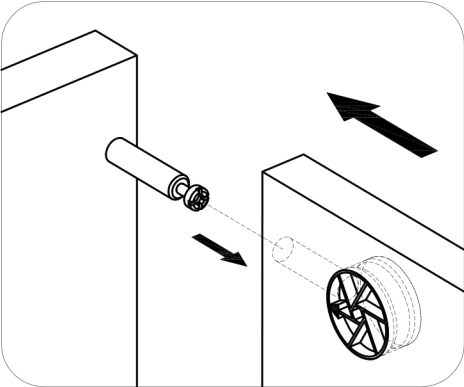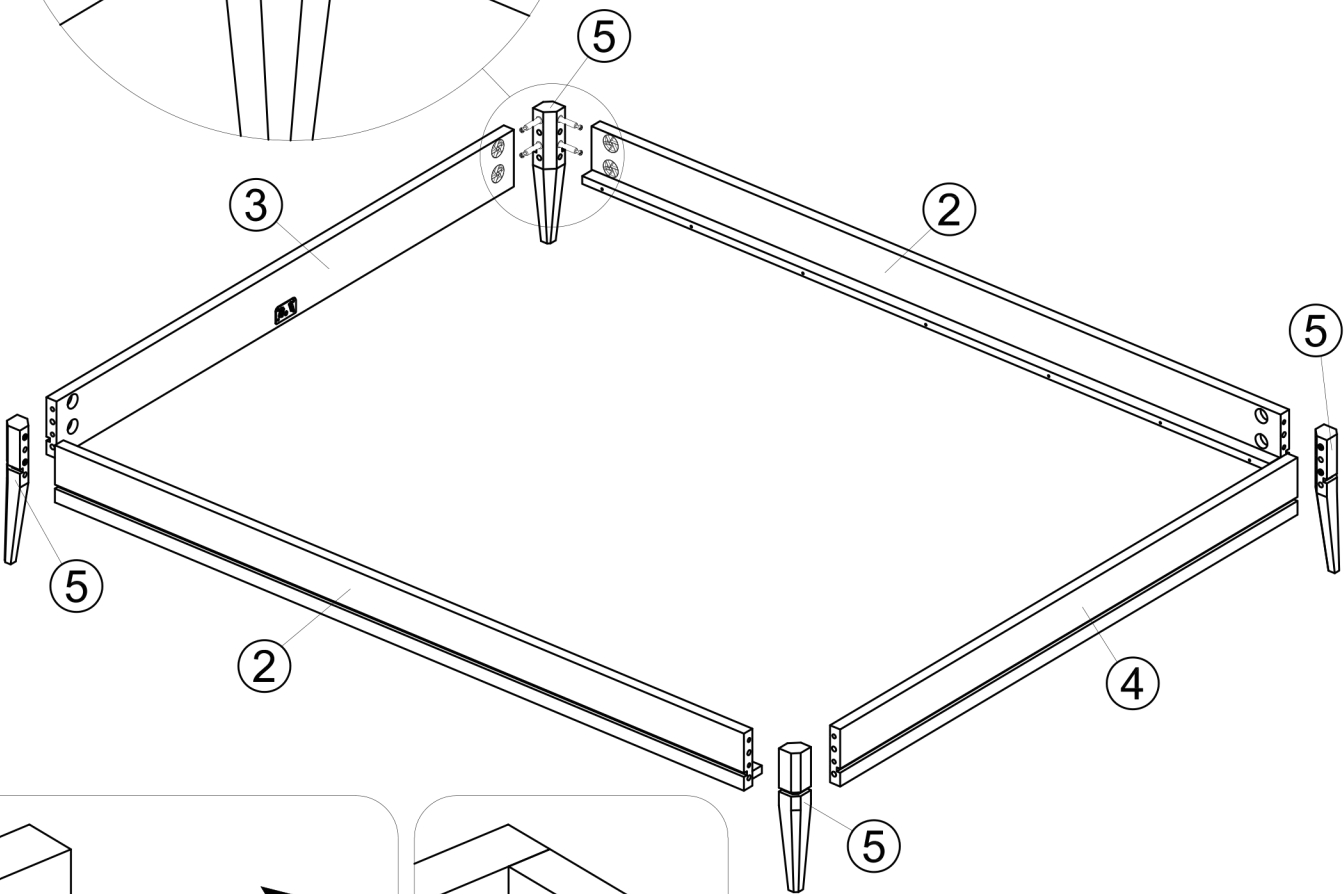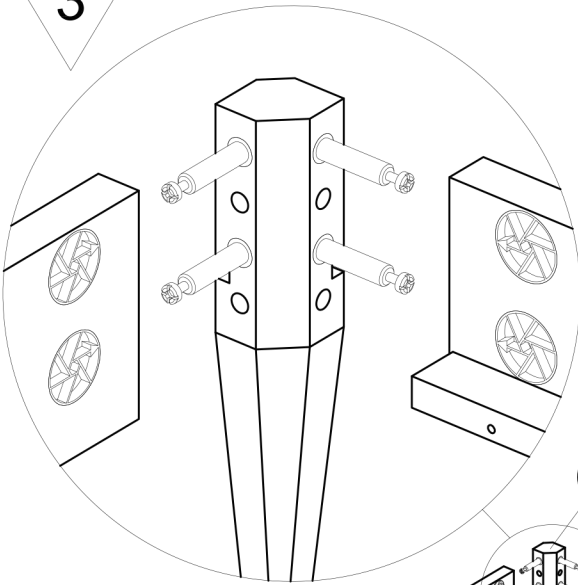


4 x3

K1 x9



Ø8x35

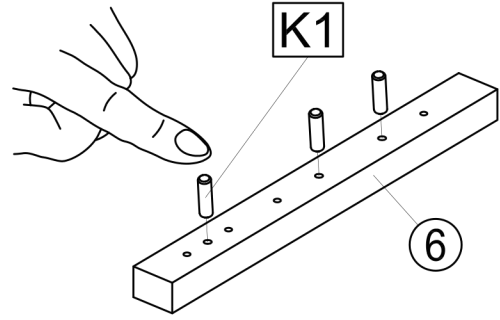

5

O3 x1

E2 x6


H3 x6




k5 mm




M6



Ø6x35

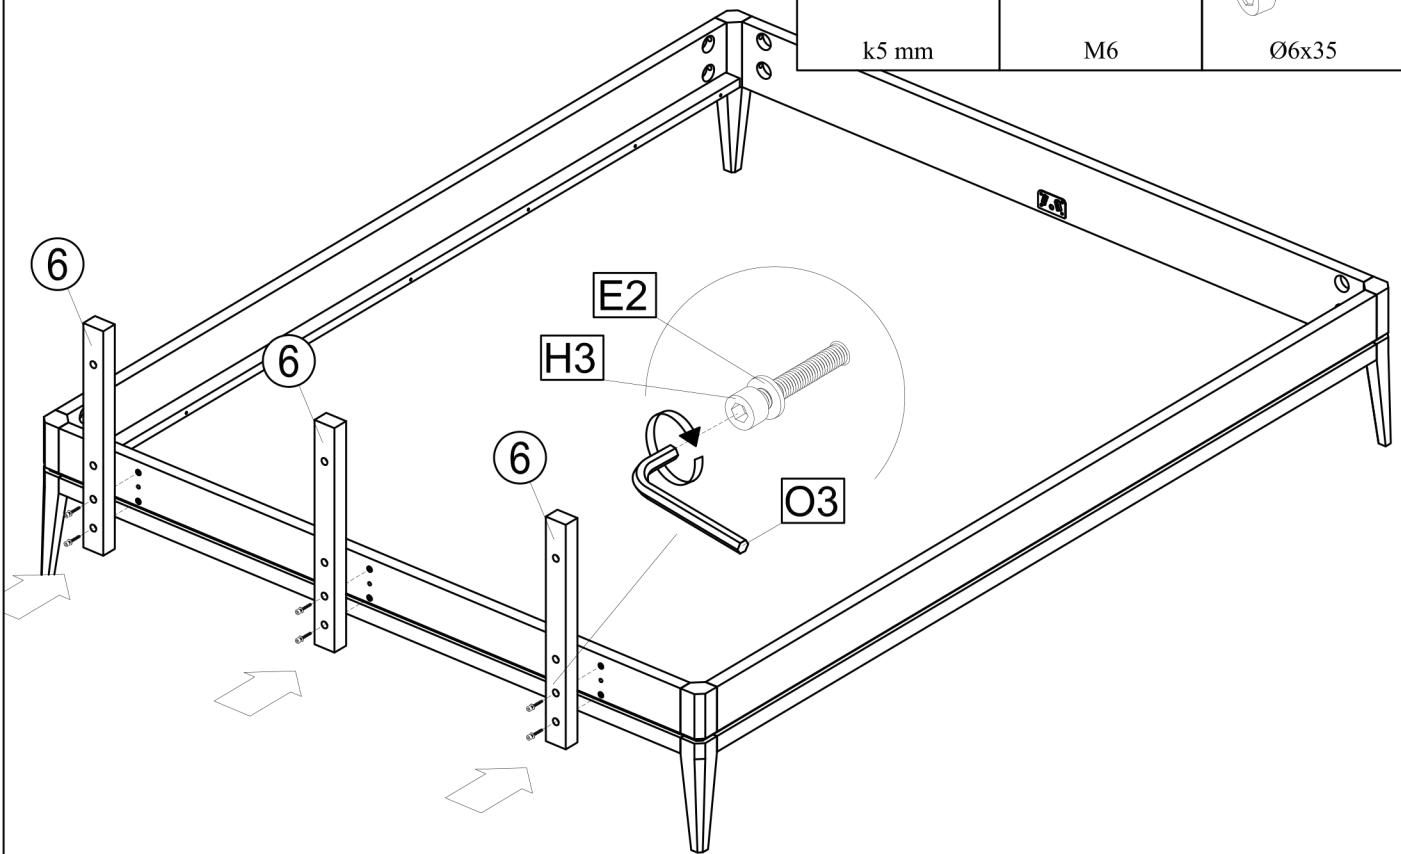

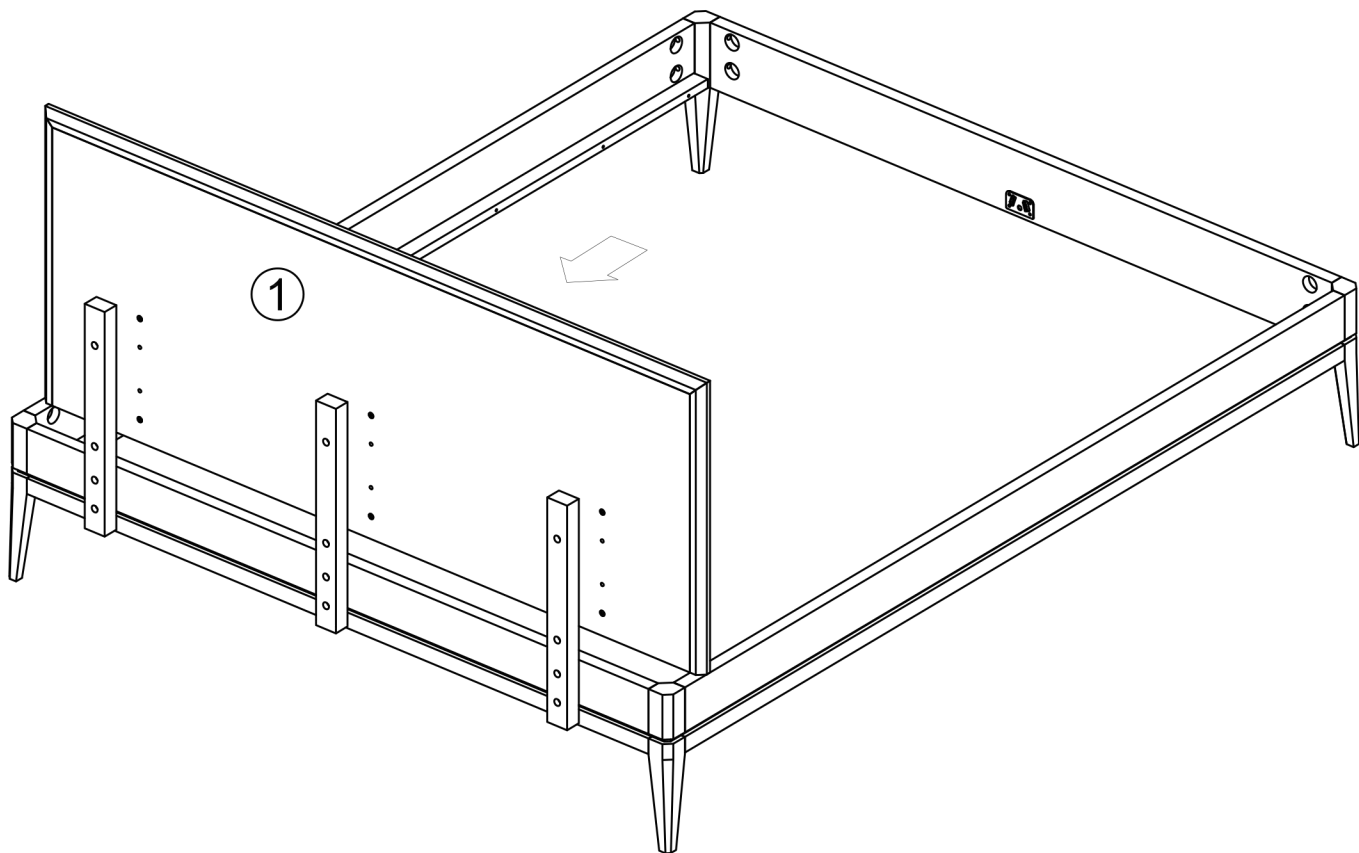



6





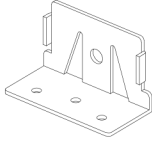

5




7

O3 x1	E2 x6	H3 x6
		
k5 mm	M6	Ø6x35




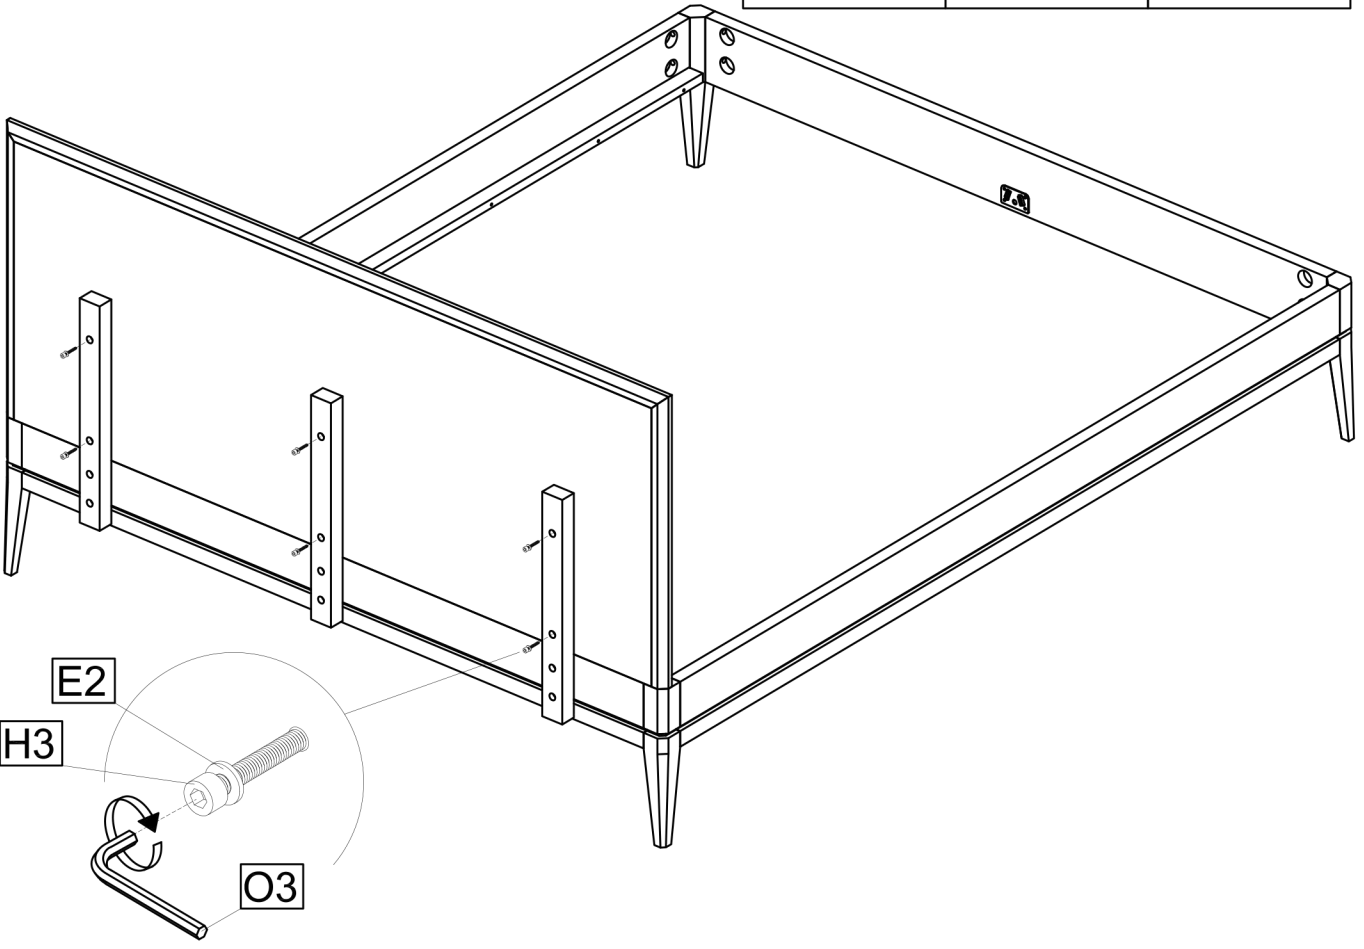


8

A1 x4	O1 x1	P2 x2	J2 x6
			
Ø7x50	k4 mm		4x16

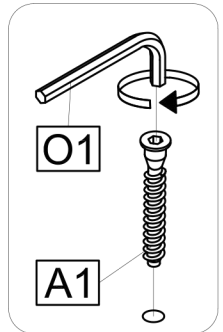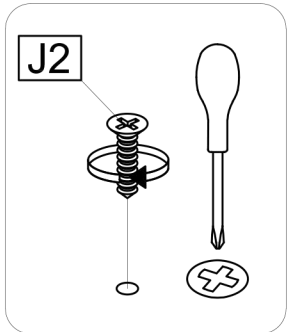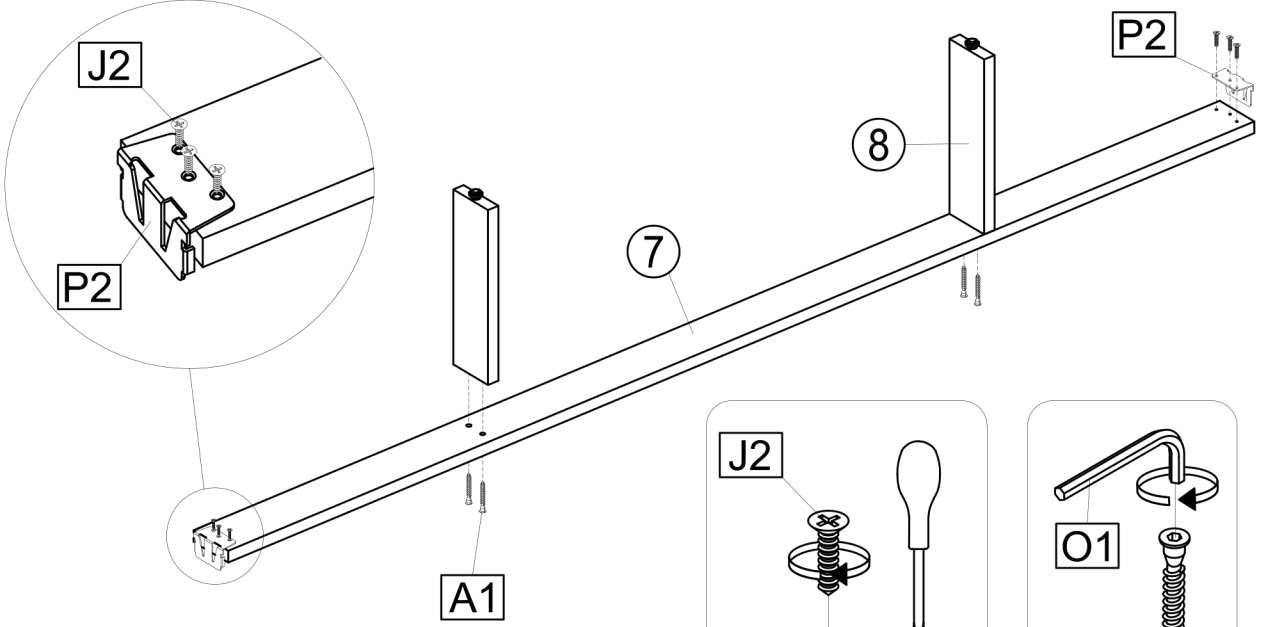

9

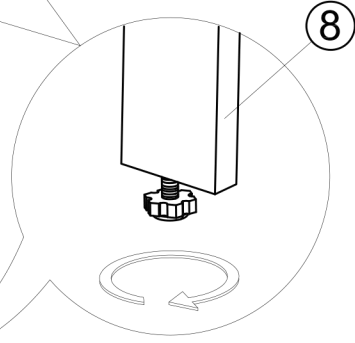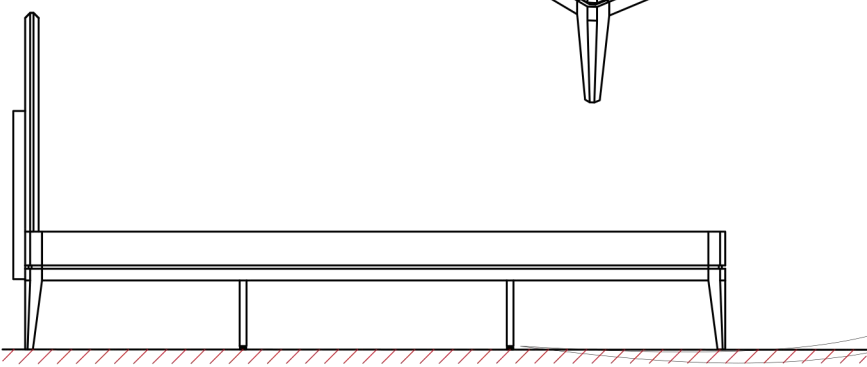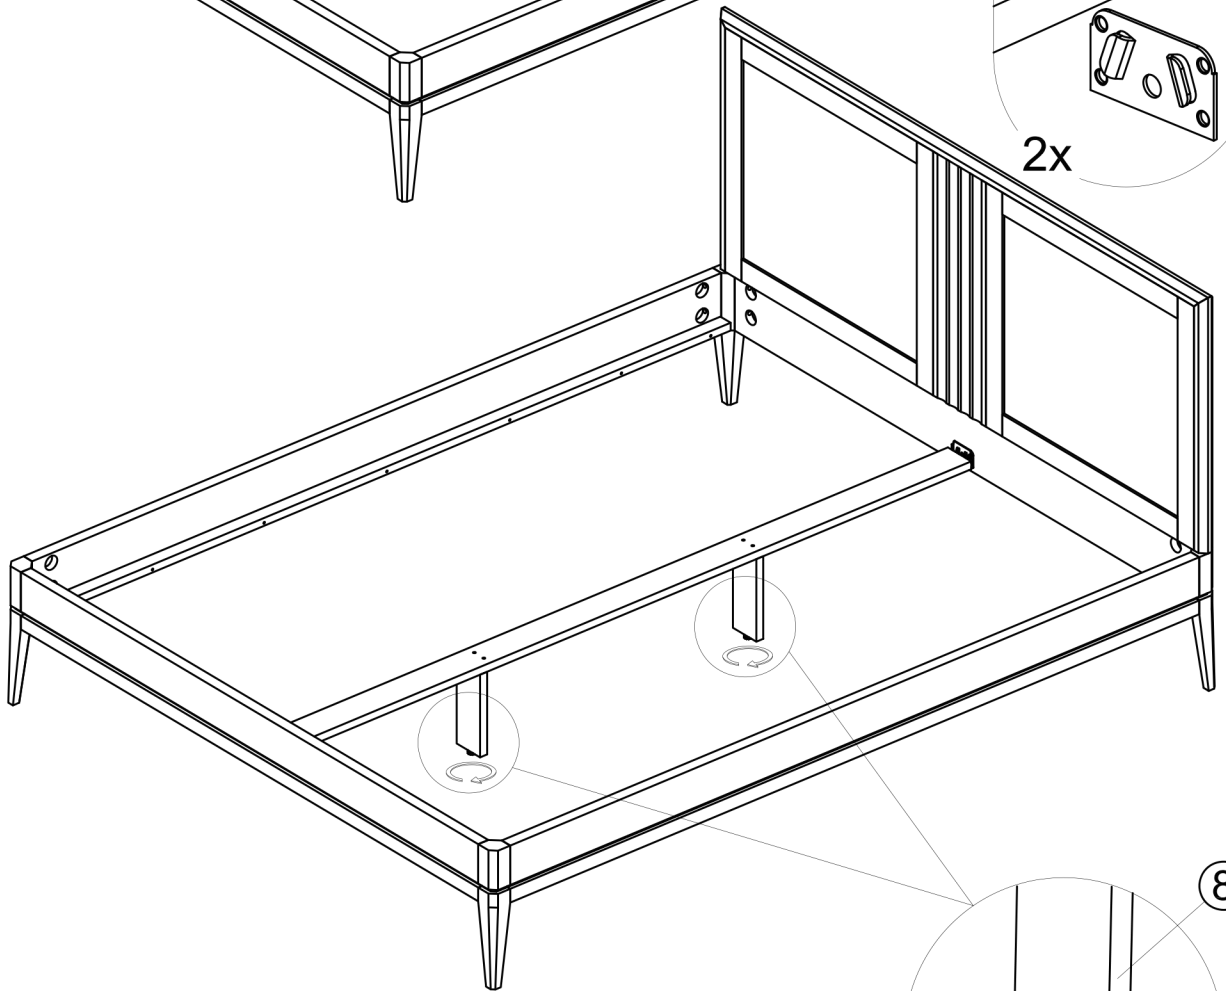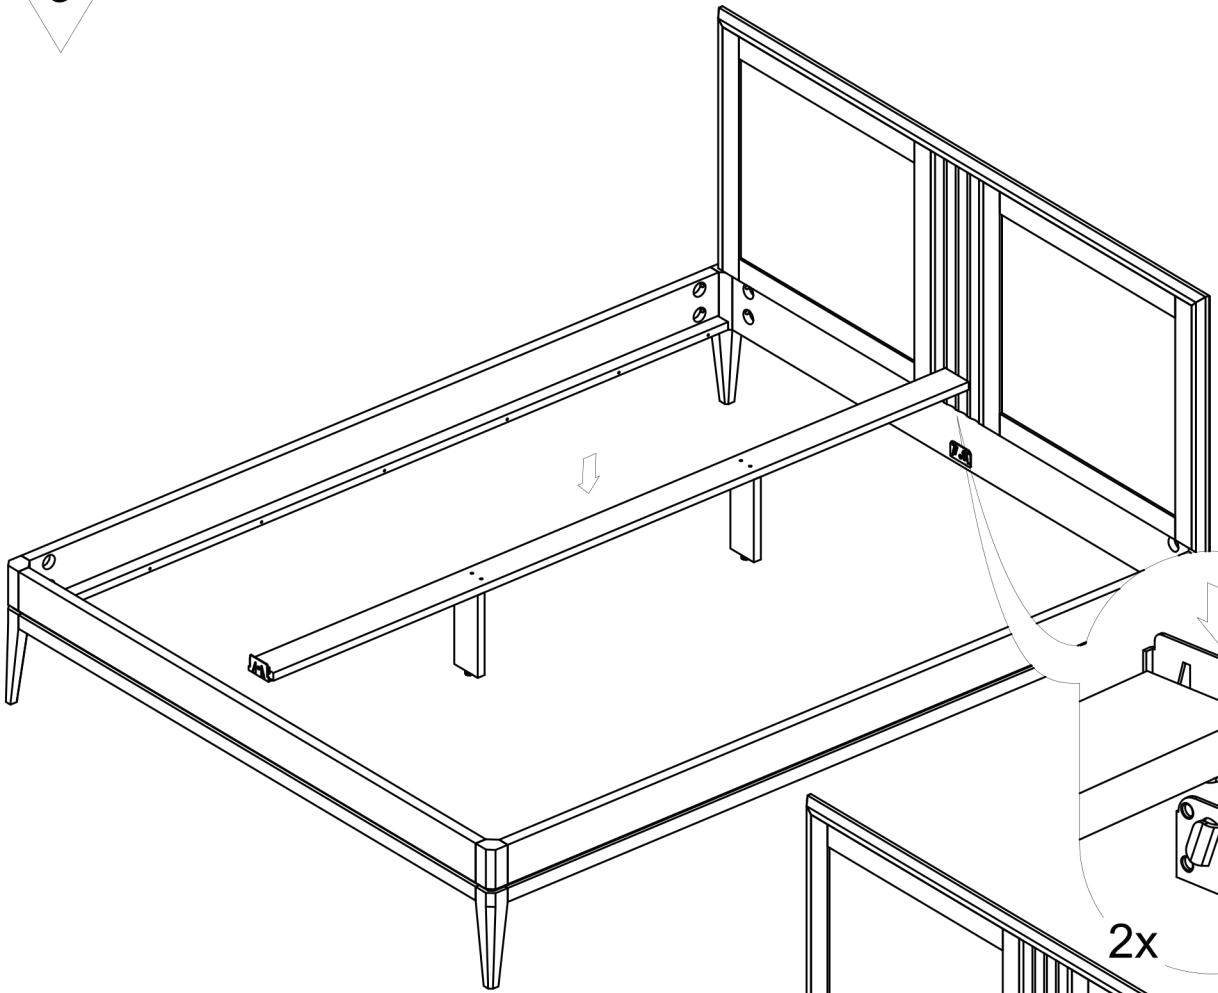

8

7