

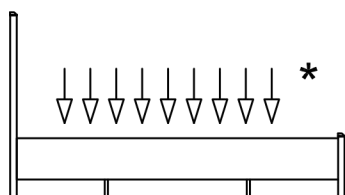


ИНСТРУКЦИЯ ПО СБОРКЕ



КАНБЕРРА кровать


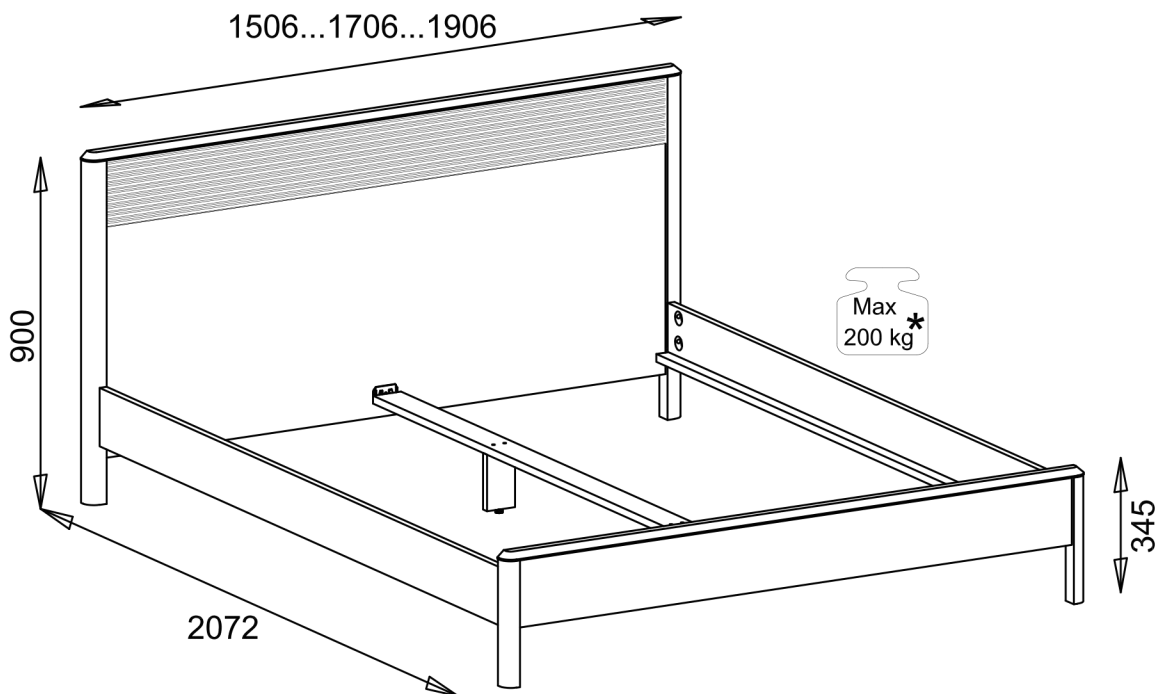


- | | |
|----------------------------------|------------------------------|
| (D) Montageanleitung | (GB) Assembly instructions |
| (FR) Notice de montage | (IT) Istruzioni di montaggio |
| (NL) Handleiding voor de montage | (PL) Instrukcja montażu |
| (CZ) Montážní návod | (SK) Návod na montáž |
| (HU) Szerelési útmutató | (RO) Instrucțiuni de montaj |
| (TR) Montaj talimatları | (RU) Инструкция по монтажу |

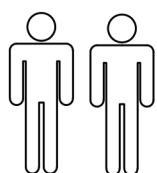





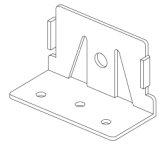





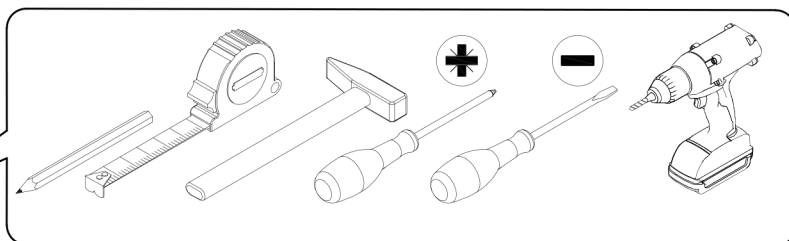
90 min

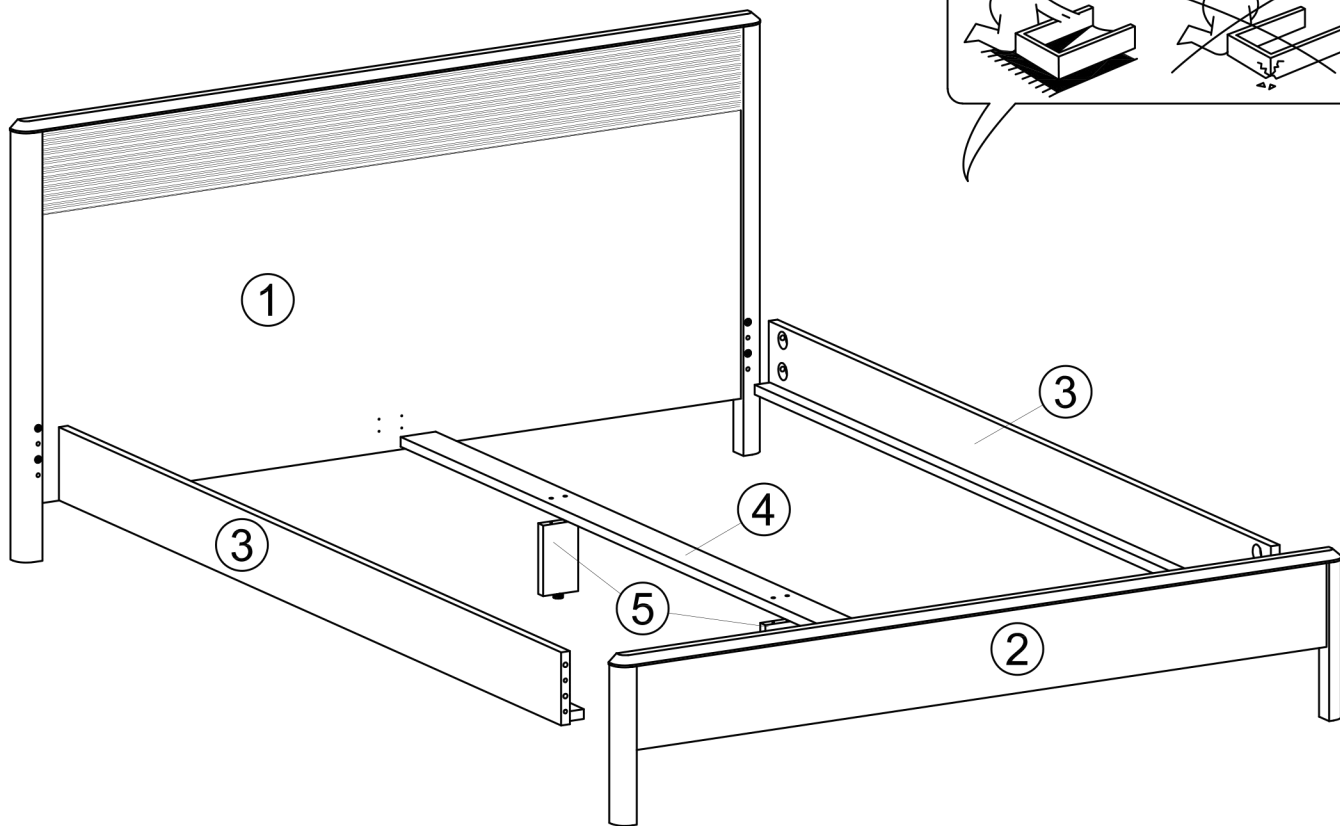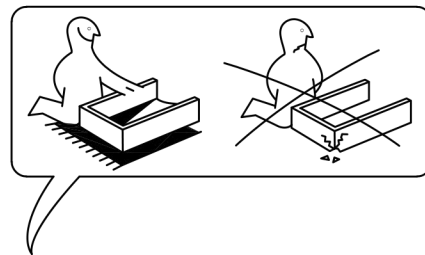

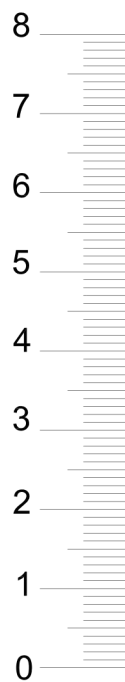


№	Size/MaB			Qty	✓
	1400	1600	1800		
1	1506x900x40	1706x900x40	1906x900x40	1	
2	1466x345x40	1666x345x40	1866x345x40	1	
3	1990x150x55			2	
4	1990x80x20			1	
5	145(+10)x80x20			2	

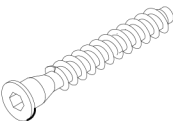

A1 x4  Ø7x50	B3 x8  Ø9x58 M8x9.5	C3 x8  Ø35x15	P2 x2 	P3 x2 	K1 x8  Ø8x35	J2 x14  4x16
R1 x4 	O1 x1  k4 mm	O2 x1  k6 mm				


1

B3 x8





Ø9x58 M8x9.5

J2 x8






4x16

P3 x2

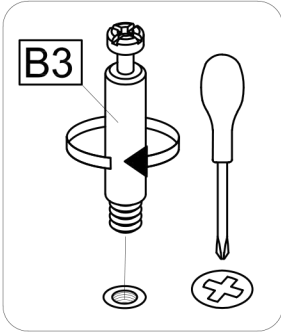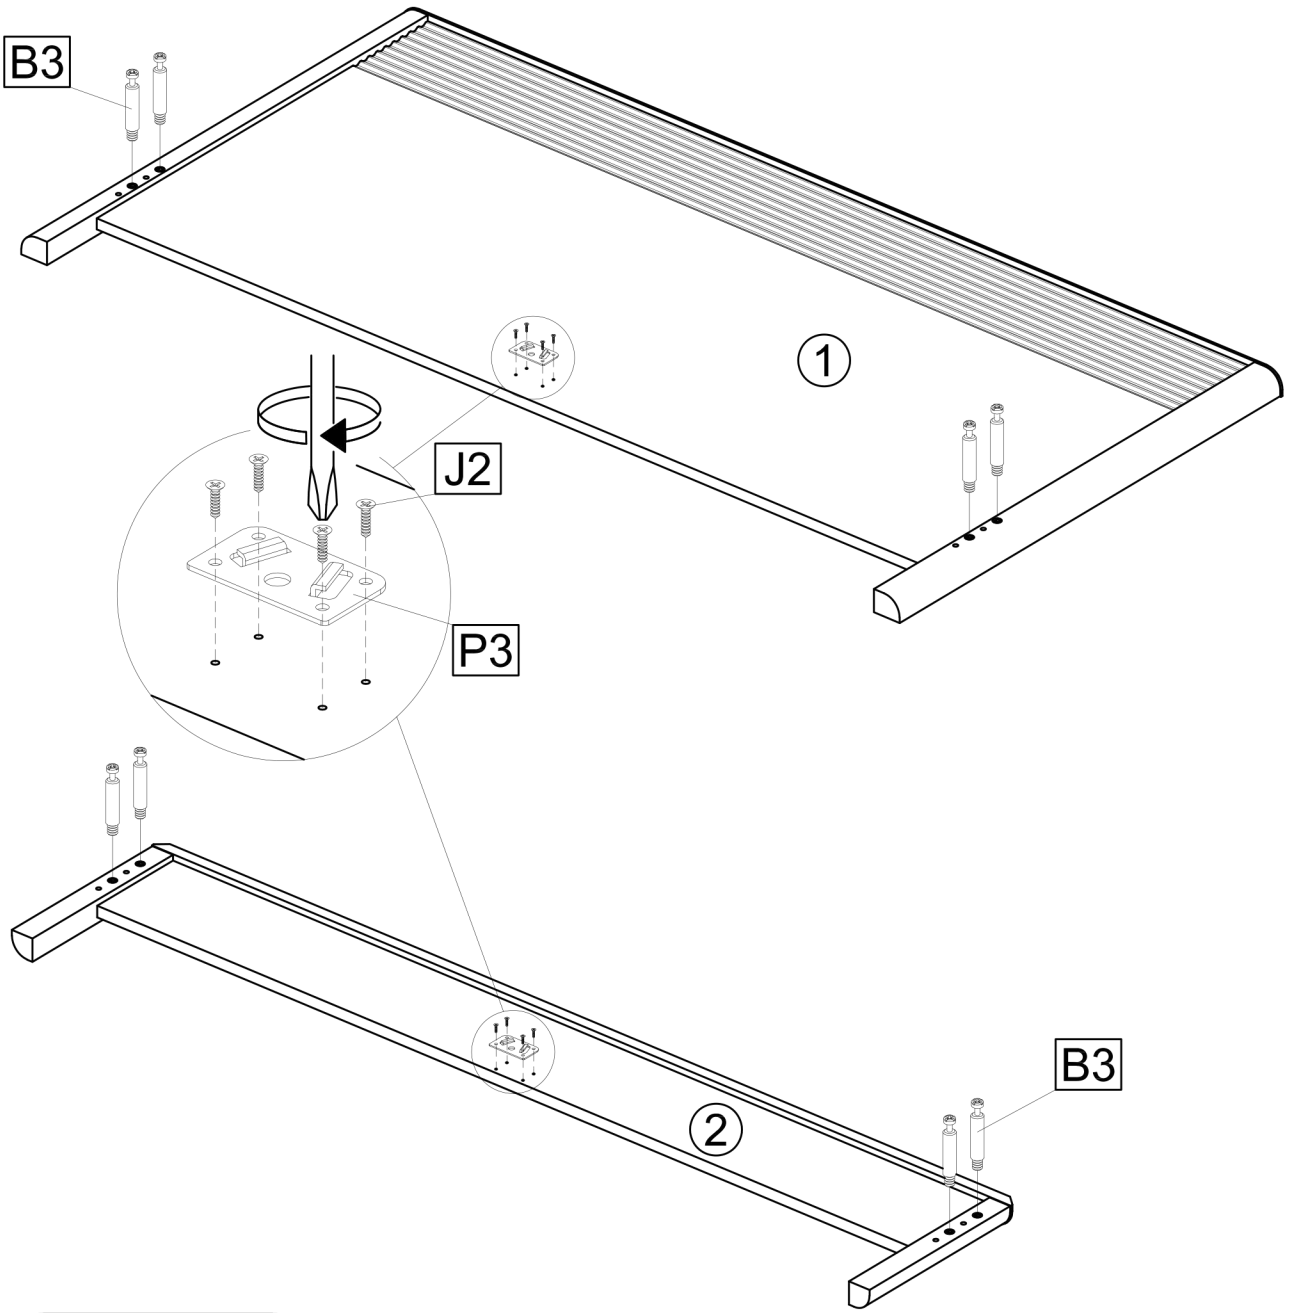

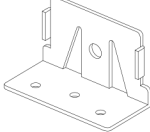




2 x2

C3 x8	K1 x8
	
Ø35x15	Ø8x35

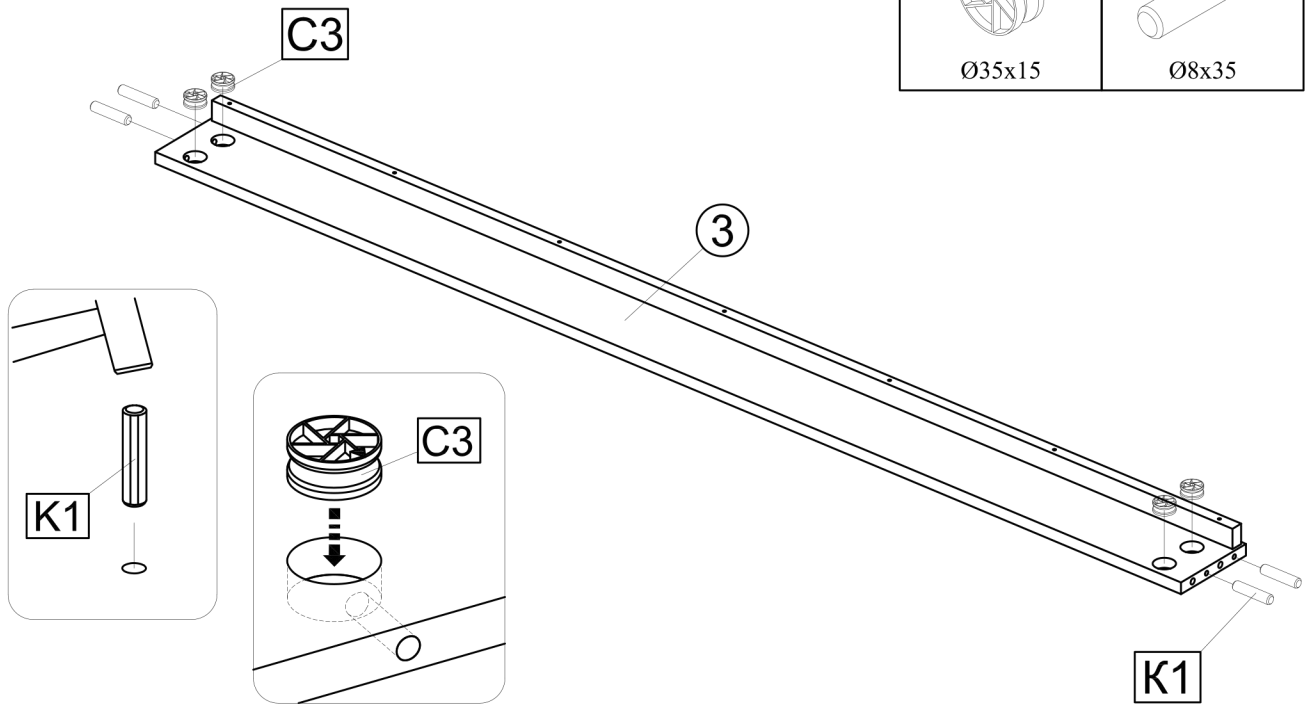

3

A1 x4	O1 x1	P2 x2	J2 x6
			
Ø7x50	k4 mm		4x16

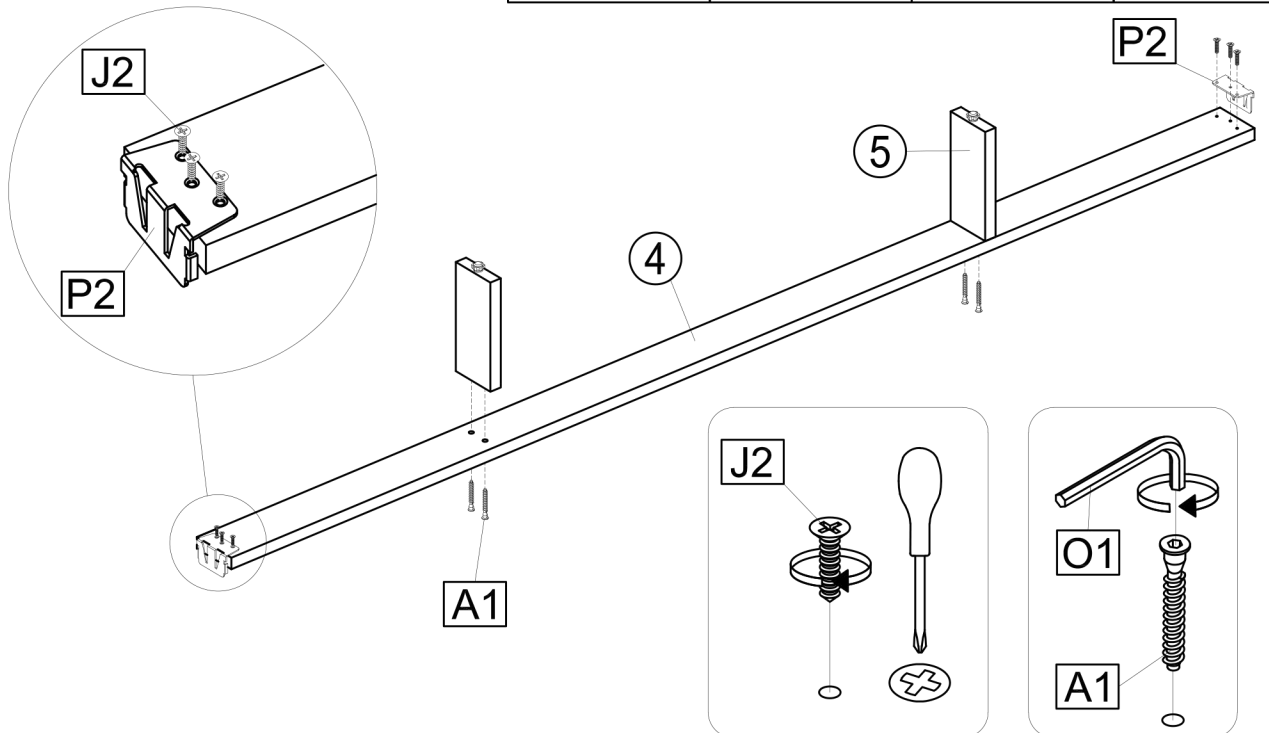



4 x4

R1 x4



O2 x1



k6 mm

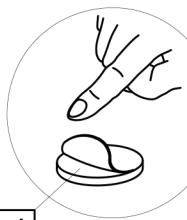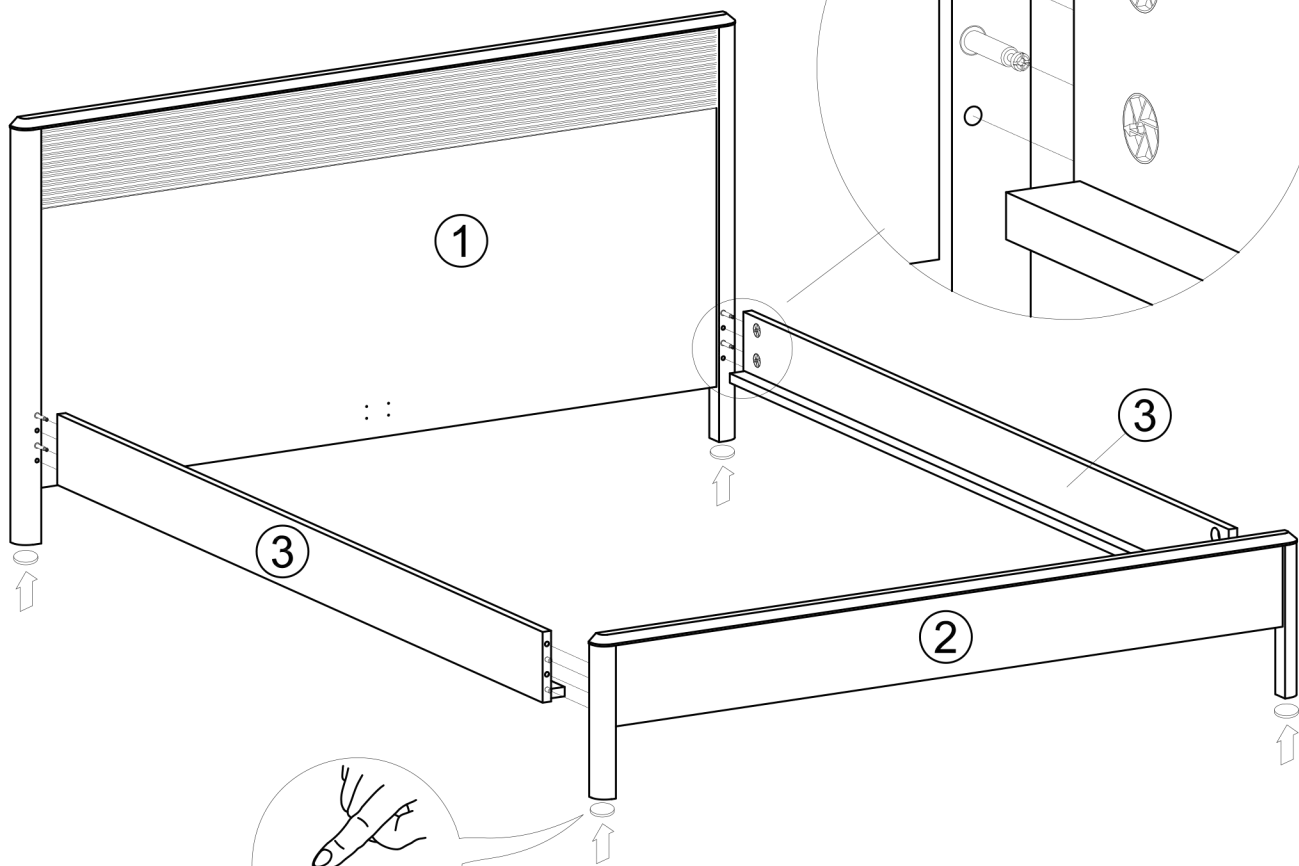

R1

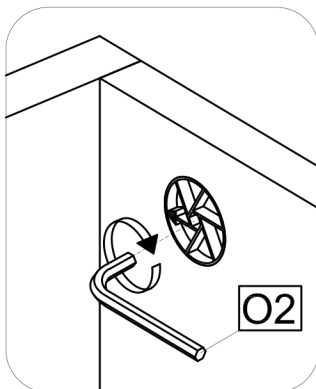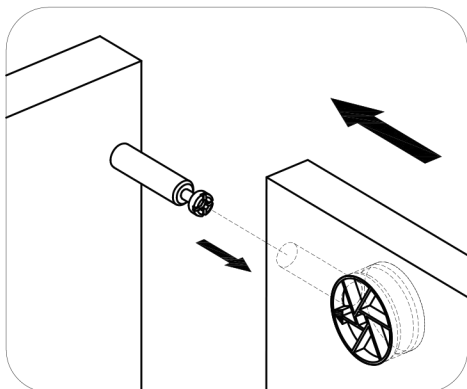

O2

5

