
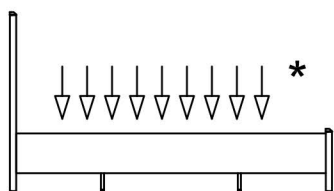


ИНСТРУКЦИЯ ПО СБОРКЕ

Канберра кровать

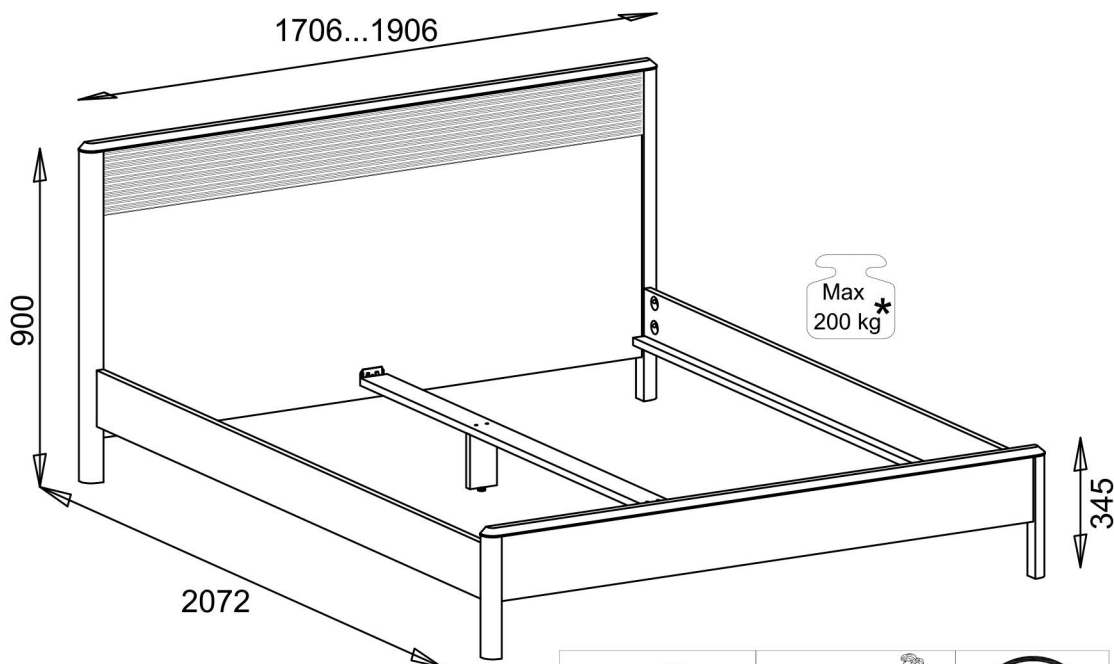

(ES) Instrucciones de montaje

(D) Montageanleitung

(FR) Notice de montage

(NL) Handleiding voor de montage

(CZ) Montážní návod

(HU) Szerelési útmutató

(GB) Assembly instructions

(IT) Istruzioni di montaggio



(PL) Instrukcja montażu



(SK) Návod na montáž

(RO) Instrucțiuni de montaj


(TR) Montaj talimatları




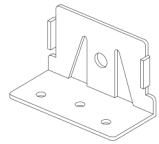





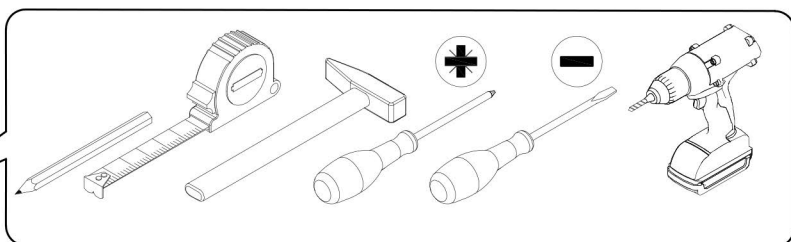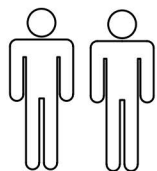
90 min

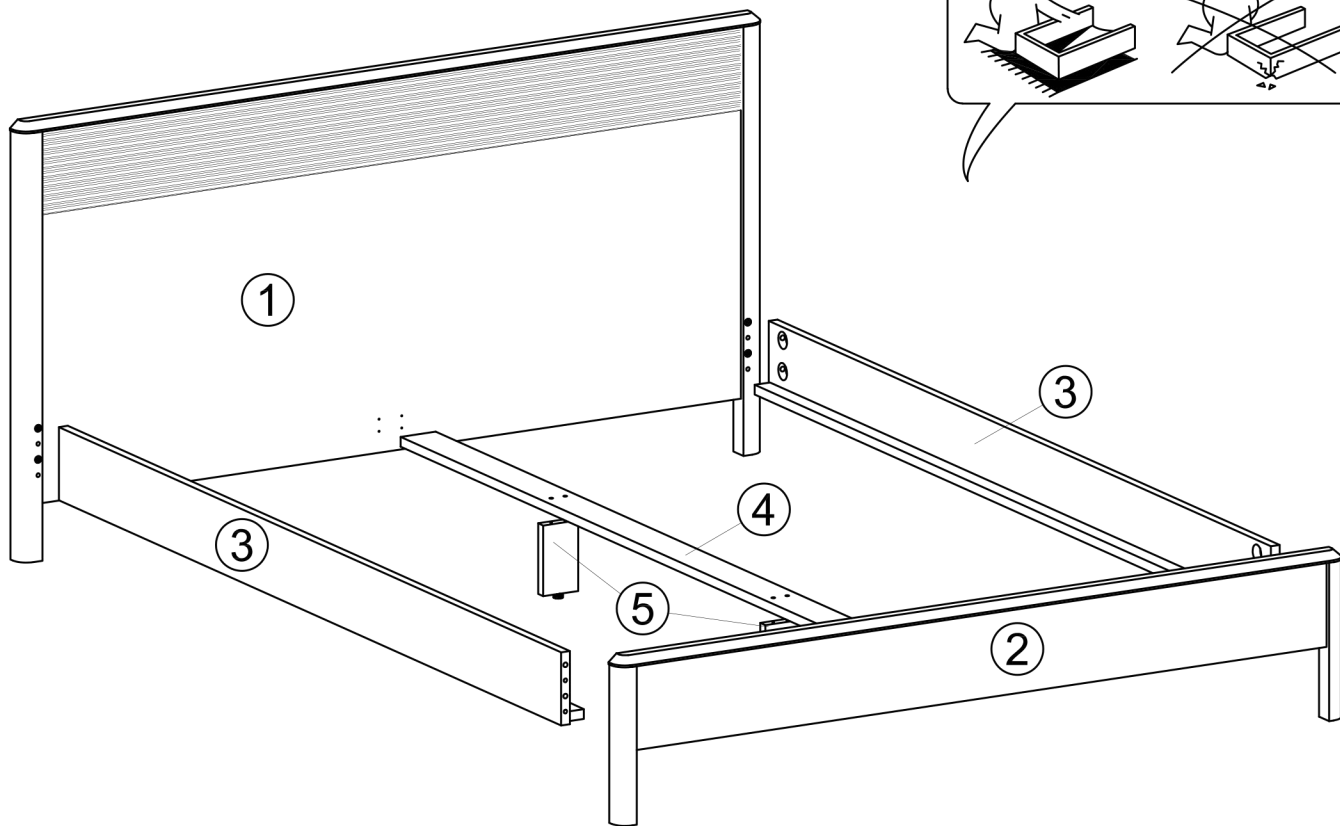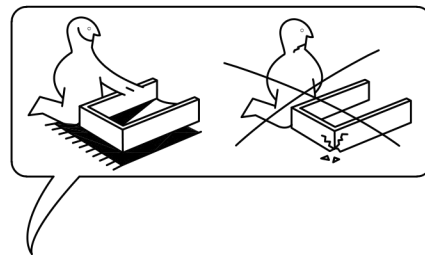

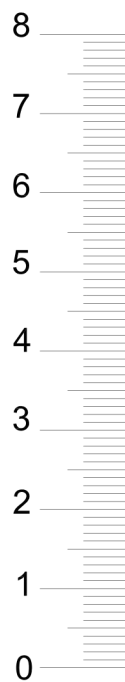


№	Size/MaB		Qty	✓
	1600	1800		
1	1706x900x40	1906x900x40	1	
2	1666x345x40	1866x345x40	1	
3	1990x150x55		2	
4	1990x80x20		1	
5	145(+10)x80x20		2	

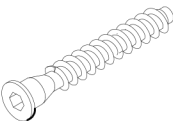

A1 x4  Ø7x50	B3 x8  Ø9x58 M8x9.5	C3 x8  Ø35x15	P2 x2 	P3 x2 	K1 x8  Ø8x35	J2 x14  4x16
R1 x4 	O1 x1  k4 mm	O2 x1  k6 mm				


1

B3 x8





Ø9x58 M8x9.5

J2 x8






4x16

P3 x2

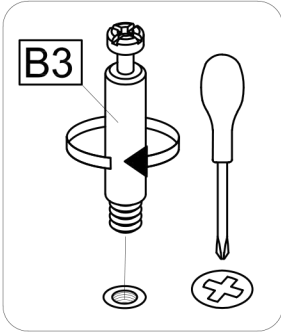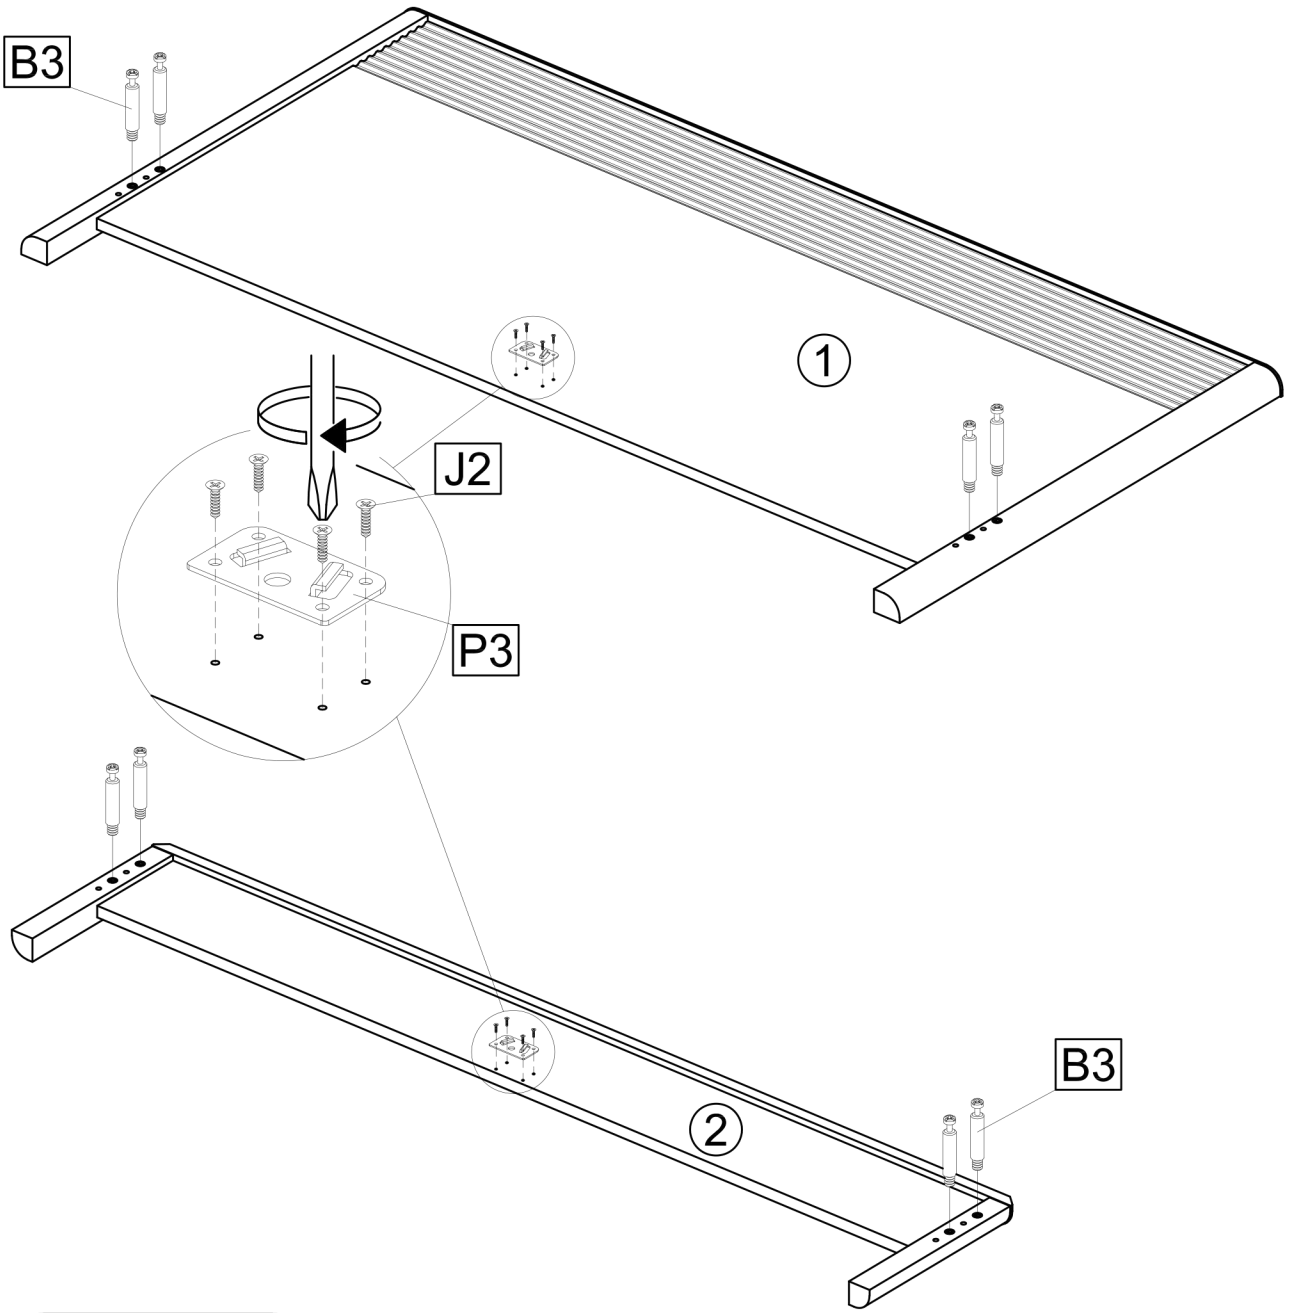






2 x2

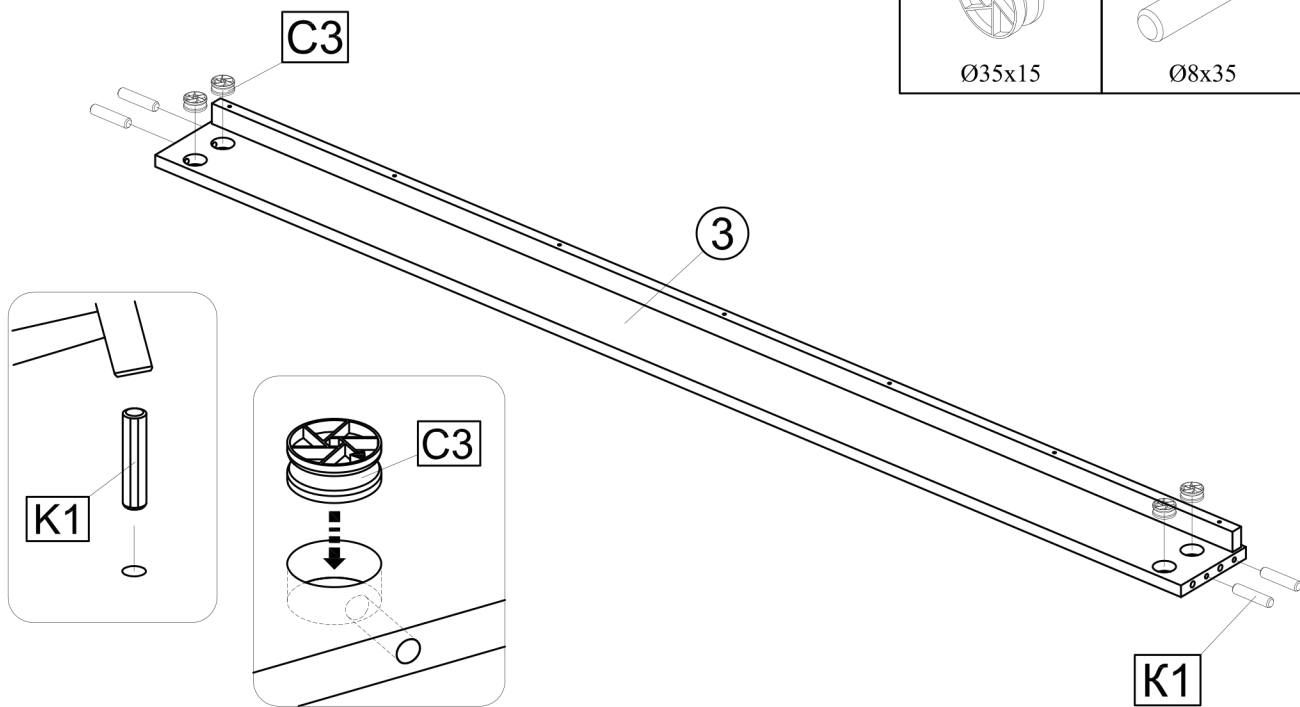C3 x8	K1 x8
	
Ø35x15	Ø8x35



3

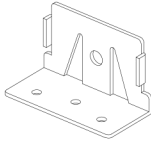A1 x4	O1 x1	P2 x2	J2 x6
			
Ø7x50	k4 mm		4x16

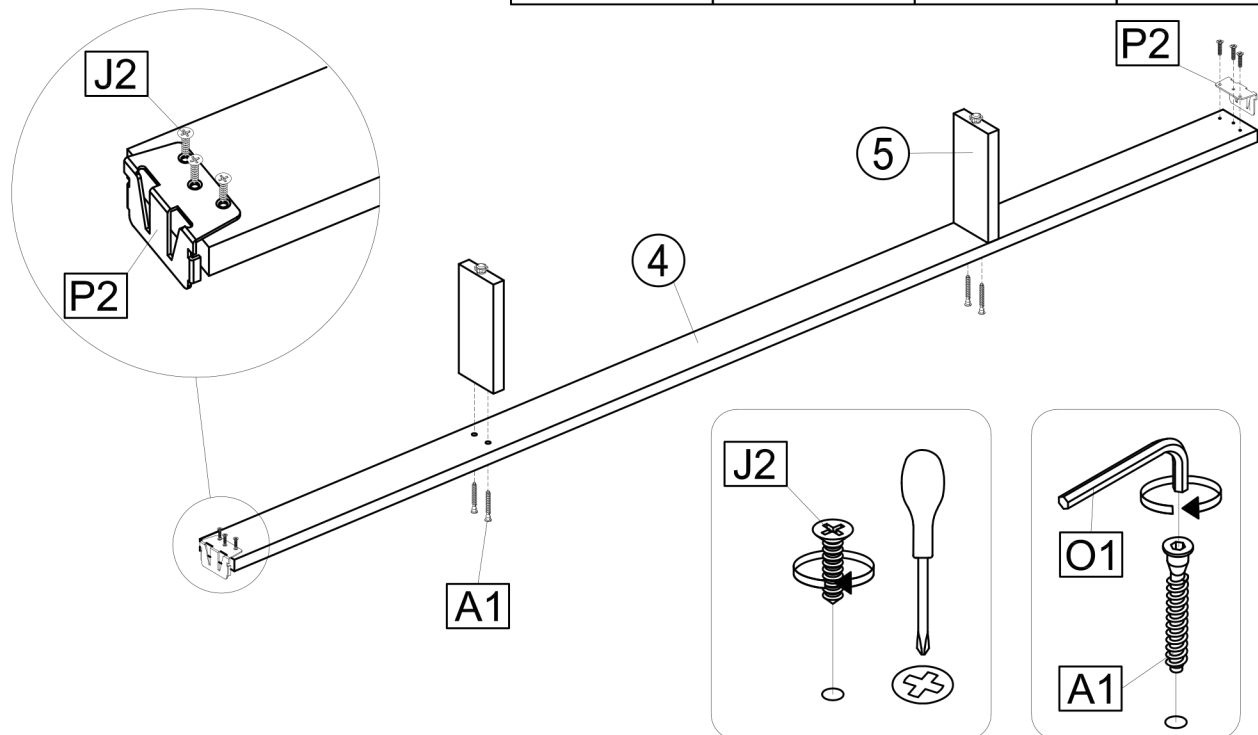



4 x4

R1 x4



O2 x1



k6 mm

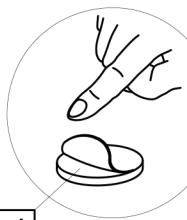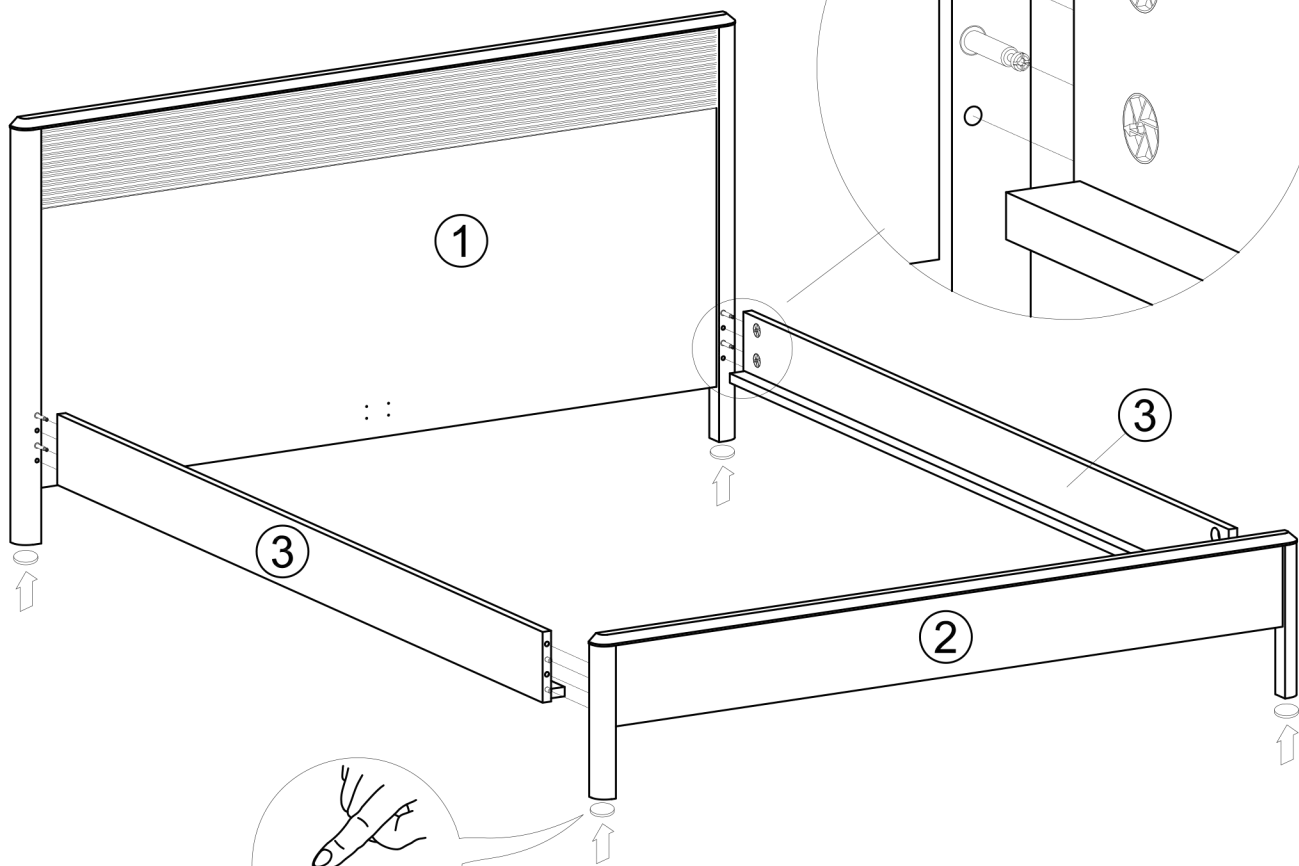

R1

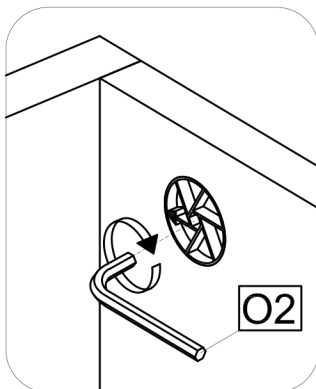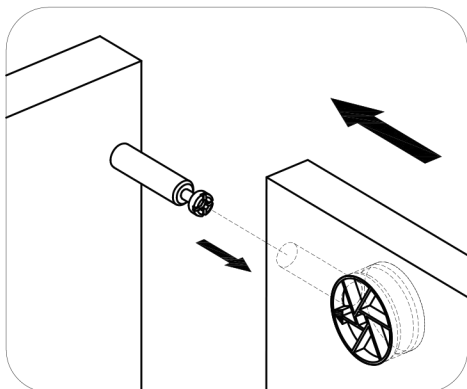

O2

5

