


ИНСТРУКЦИЯ ПО СБОРКЕ БРИСБЕН кровать

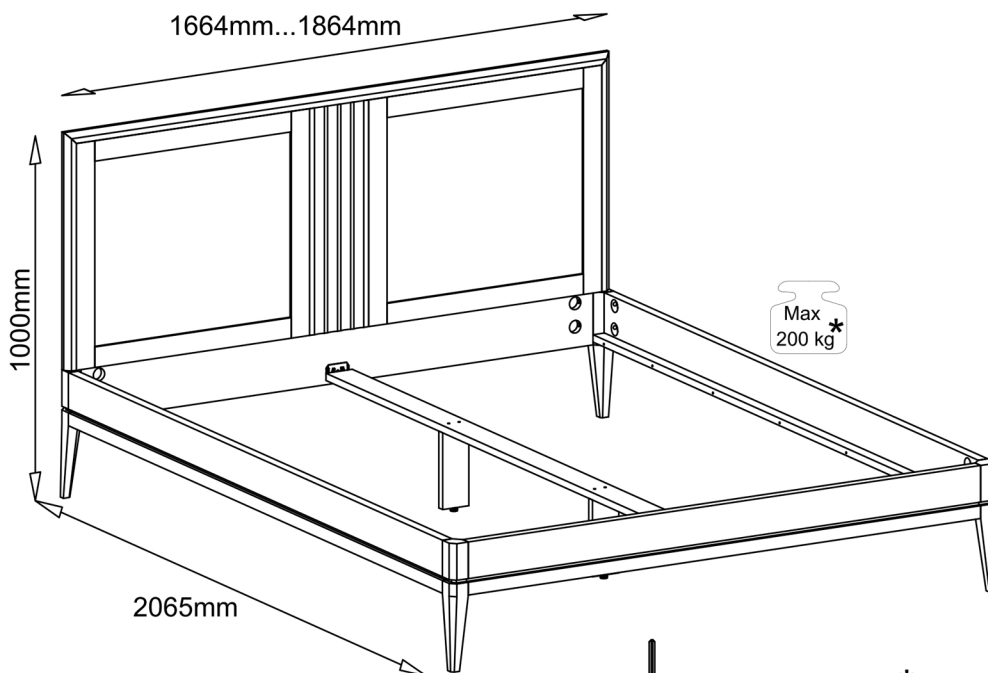

ES Instrucciones de montaje

D Montageanleitung

FR Notice de montage

NL Handleiding voor de montage

CZ Montážní návod

HU Szerelési útmutató

TR Montaj talimatları

GB Assembly instructions




IT Istruzioni di montaggio



PL Instrukcja montażu

SK Návod na montáž


RO Instrucțiuni de montaj

RU Инструкция по монтажу

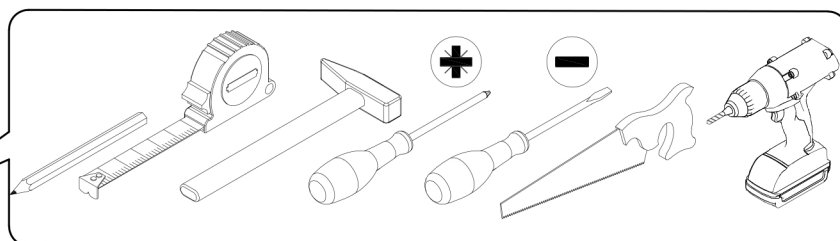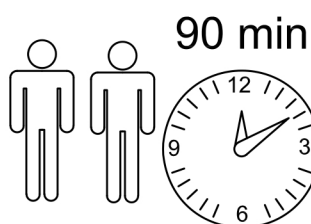

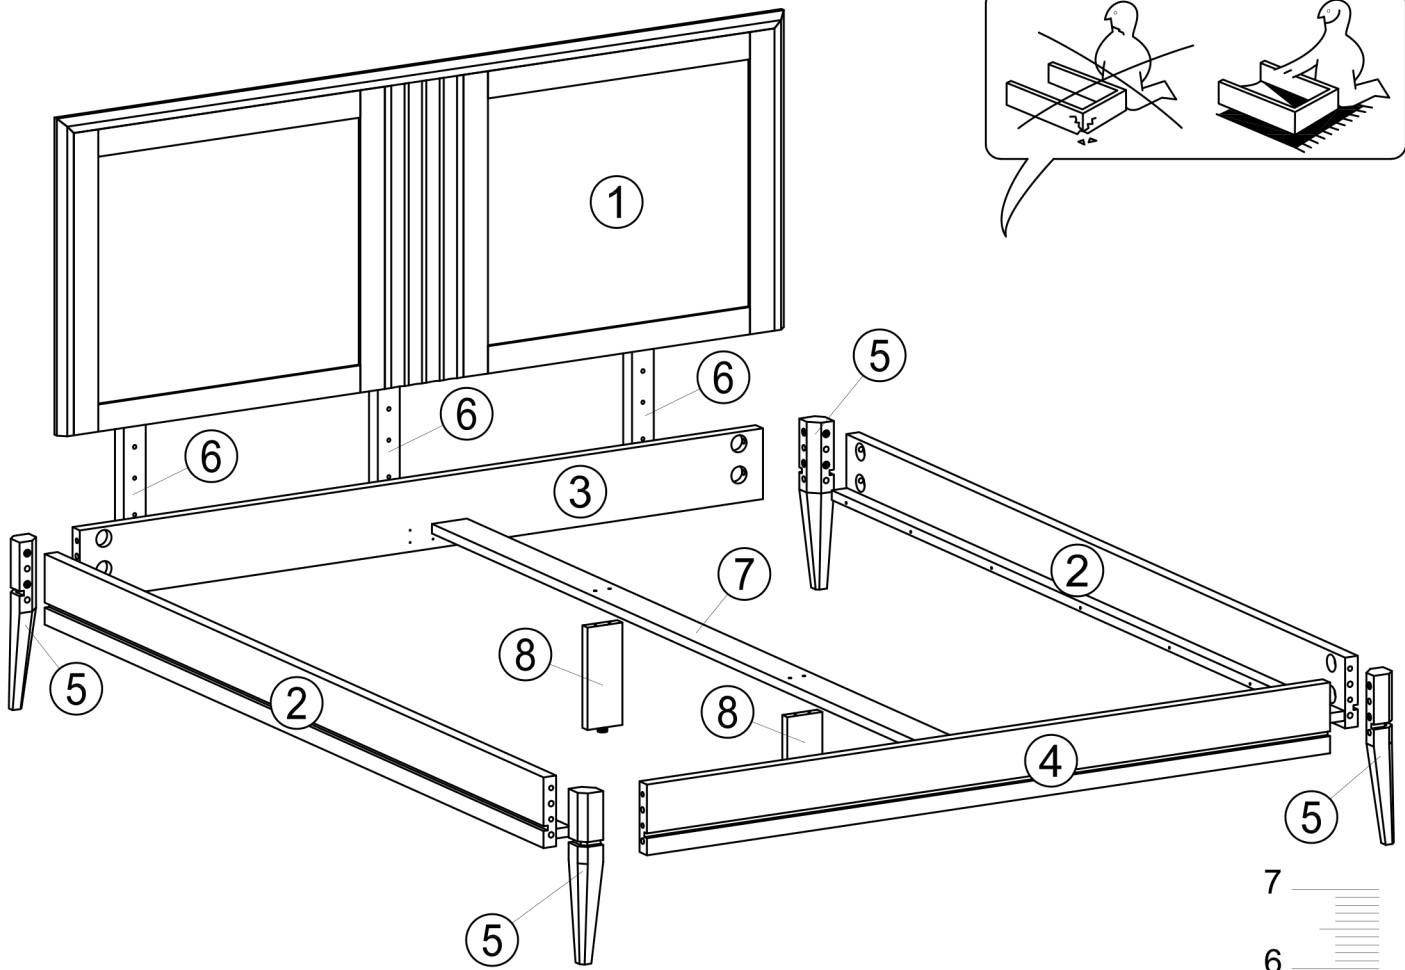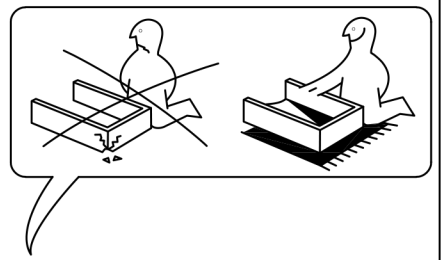

№	Size/MaB		Qty	✓
	1600	1800		
1	1664x650x40	1864x650x40	1	
2	1975x145x65		2	
3	1562x145x30	1762x145x30	1	
4	1562x145x30	1762x145x30	1	
5	350x50x50		4	
6	500x50x35		3	
7	1993x80x20		1	
8	210(+10)x80x20		2	

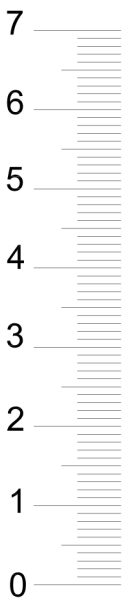

A1 x4 Ø7x50	B3 x16 Ø9x58 M8x9.5	C3 x16 Ø35x15	K1 x9 Ø8x35	K2 x16 Ø12x60	J2 x14 4x16	O1 x1 k4 mm
P2 x2 	P3 x2 	H3 x12 Ø6x35	E2 x12 M6	O2 x1 k6 mm	O3 x1 k5 mm	


1

C3 x16




Ø35x15

J2 x8




4x16


P3 x2

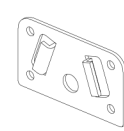

K2 x16




Ø12x60


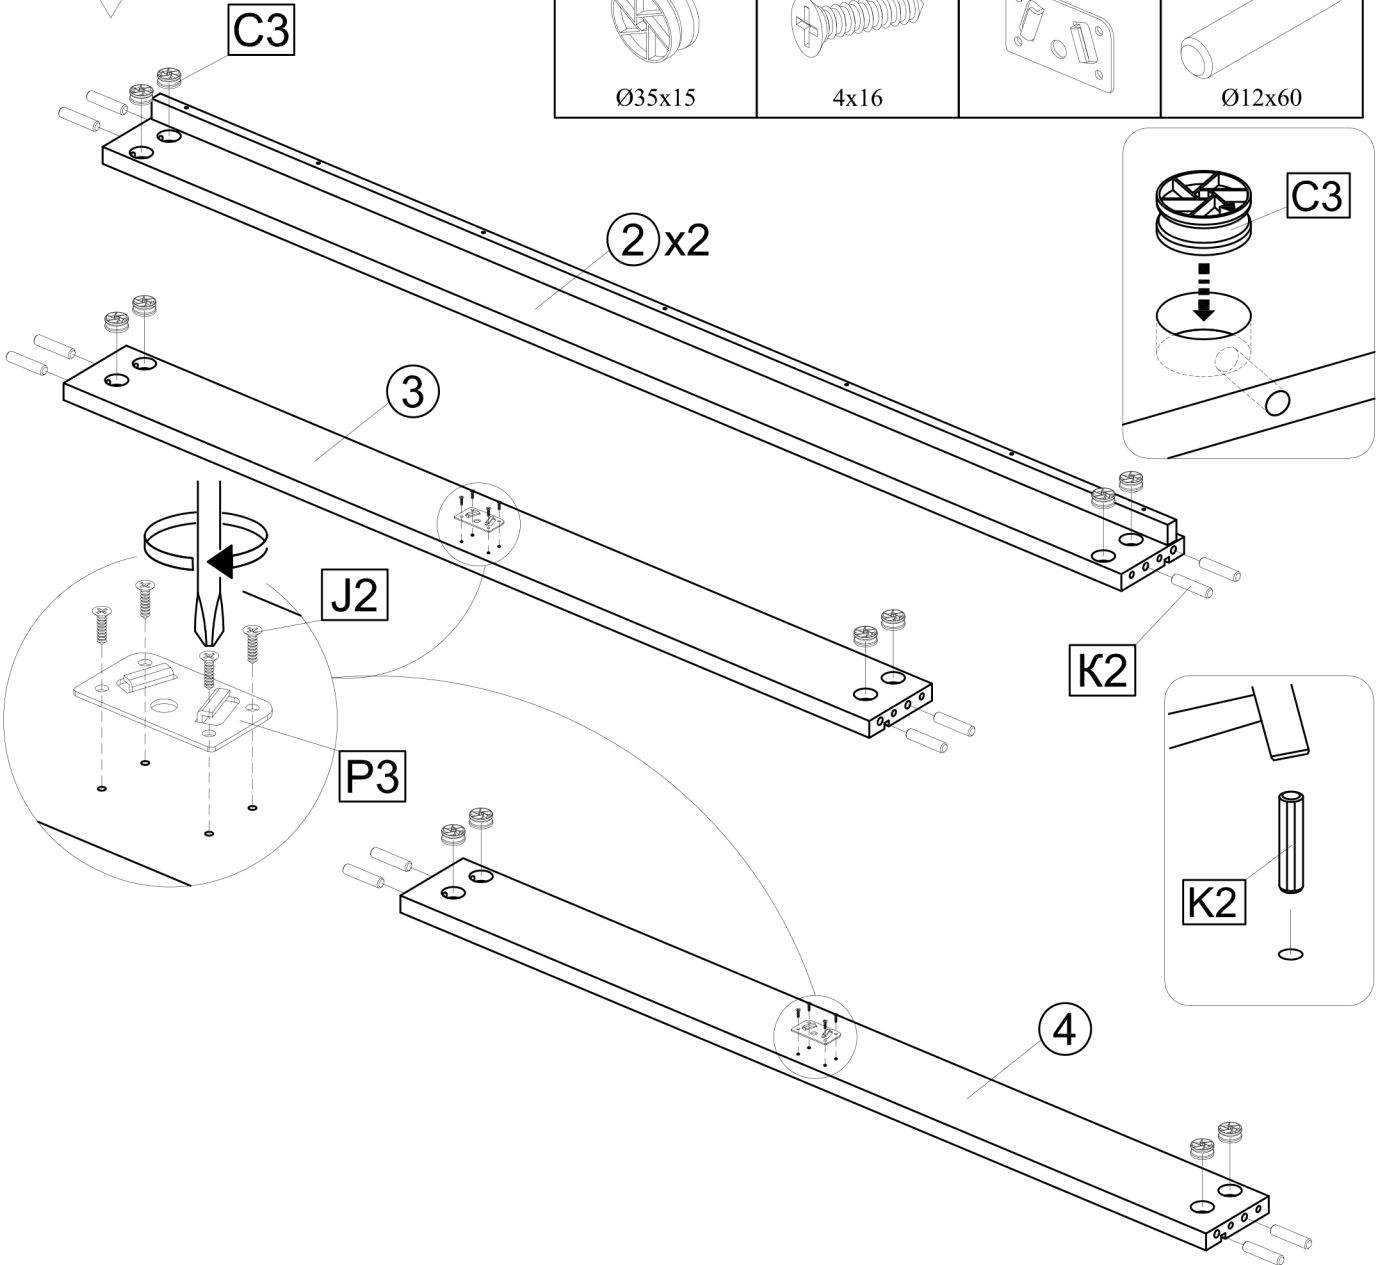


2


B3 x16



Ø9x58 M8x9.5

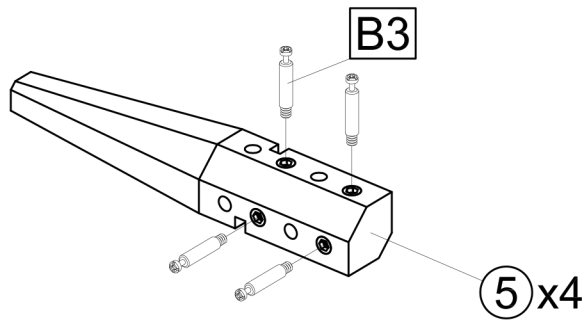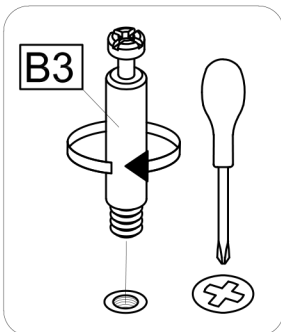




3

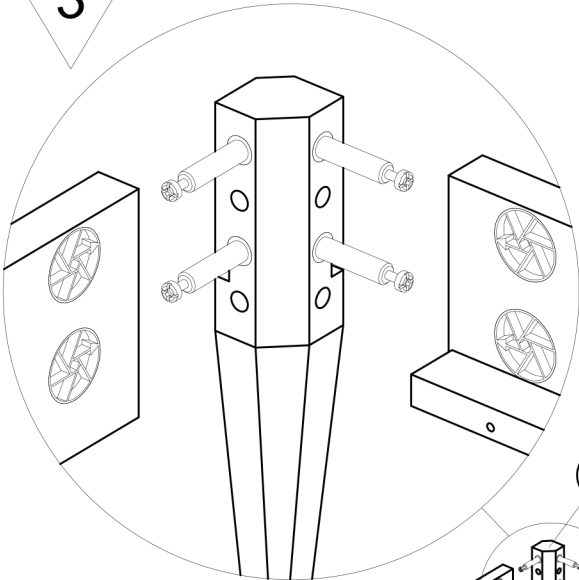


O2 x1




k6 mm

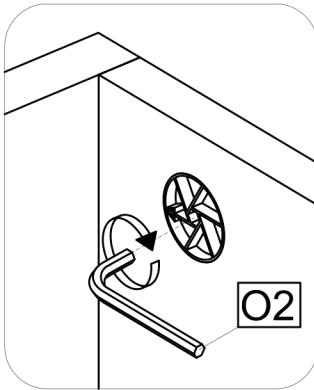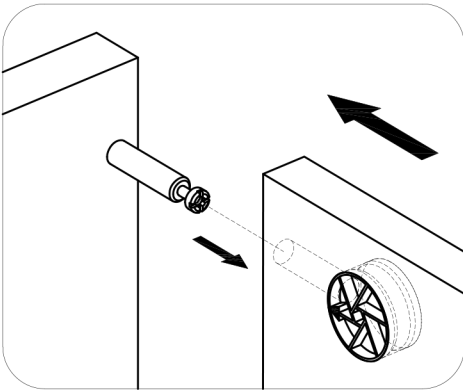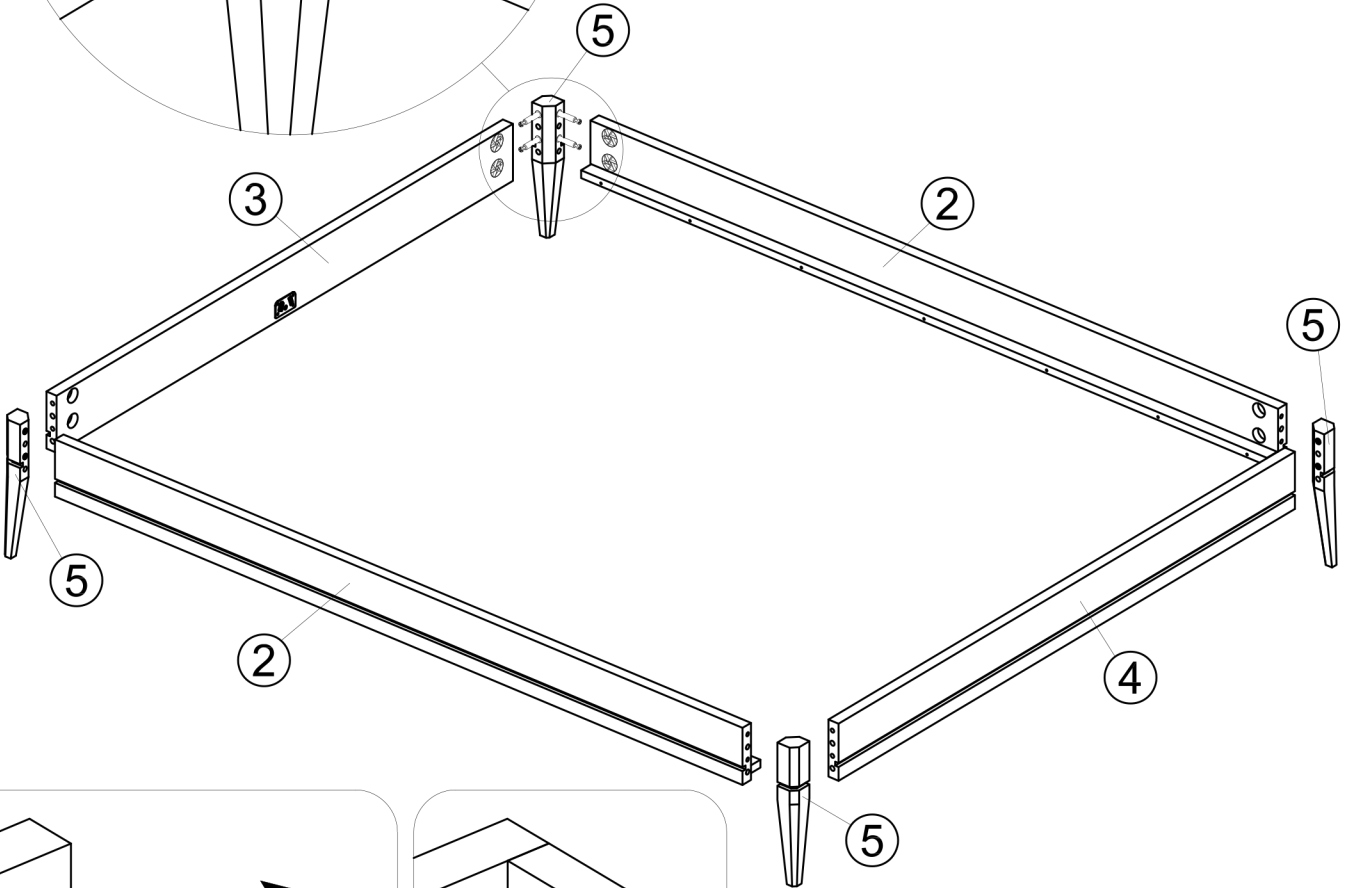

4 x3

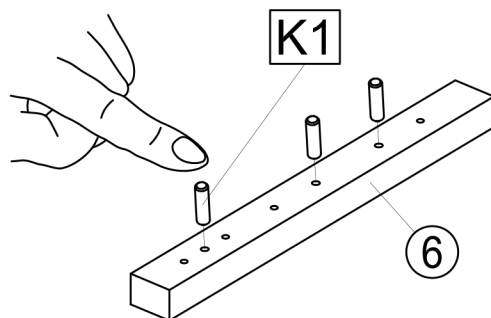





K1 x9




Ø8x35

5

O3 x1	E2 x6	H3 x6
		
k5 mm	M6	Ø6x35

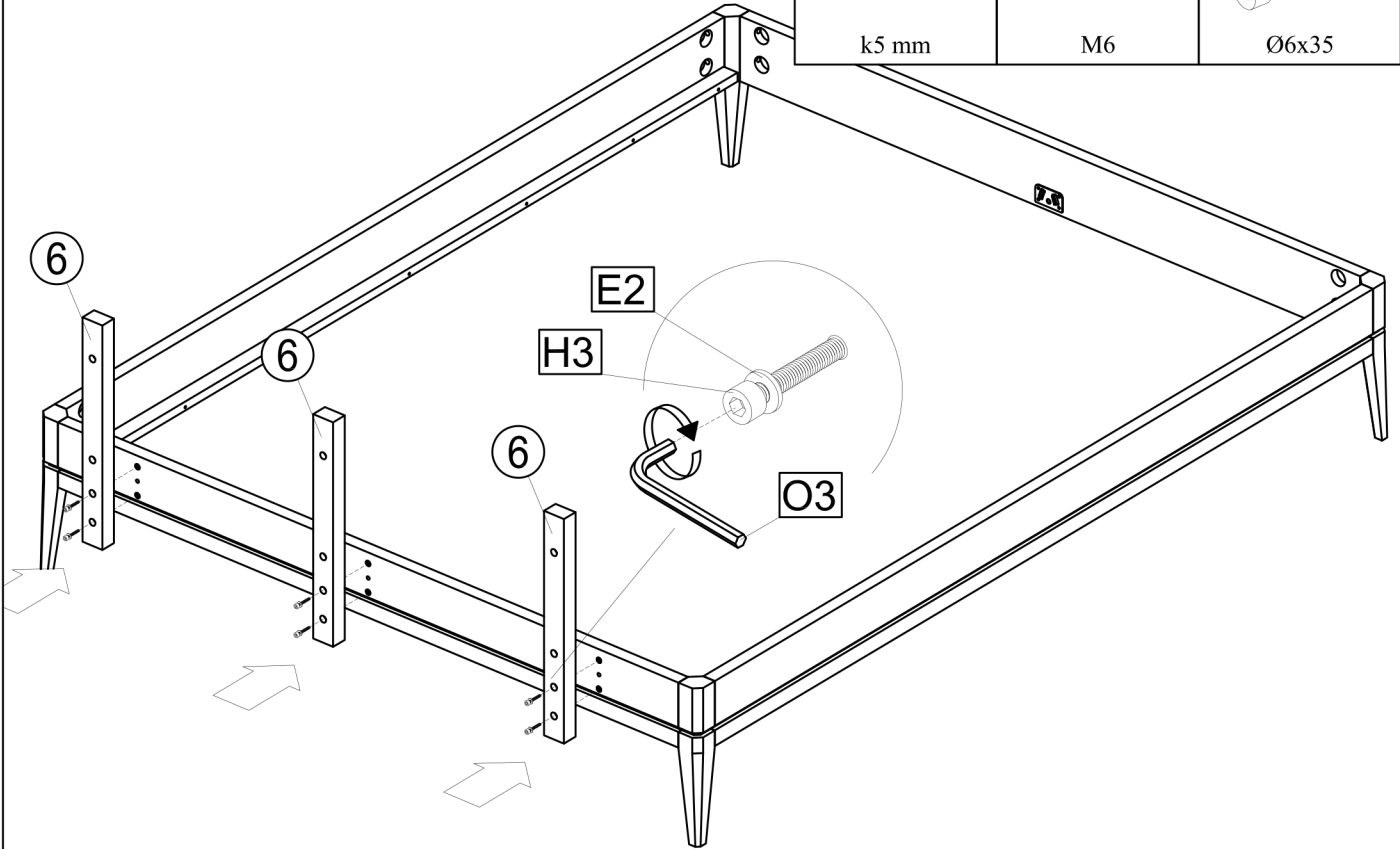

6

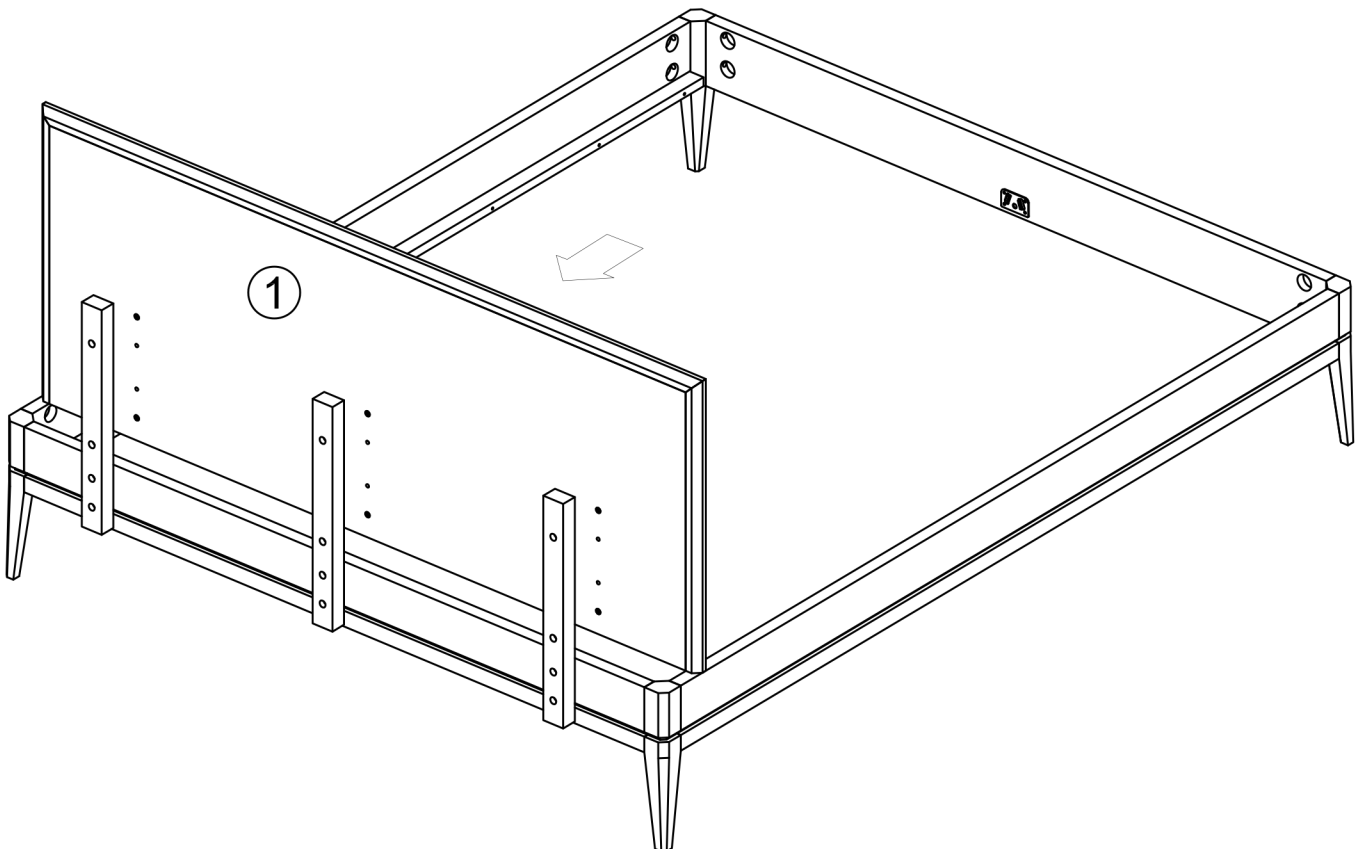

7

O3 x1

E2 x6


H3 x6




k5 mm



M6



Ø6x35

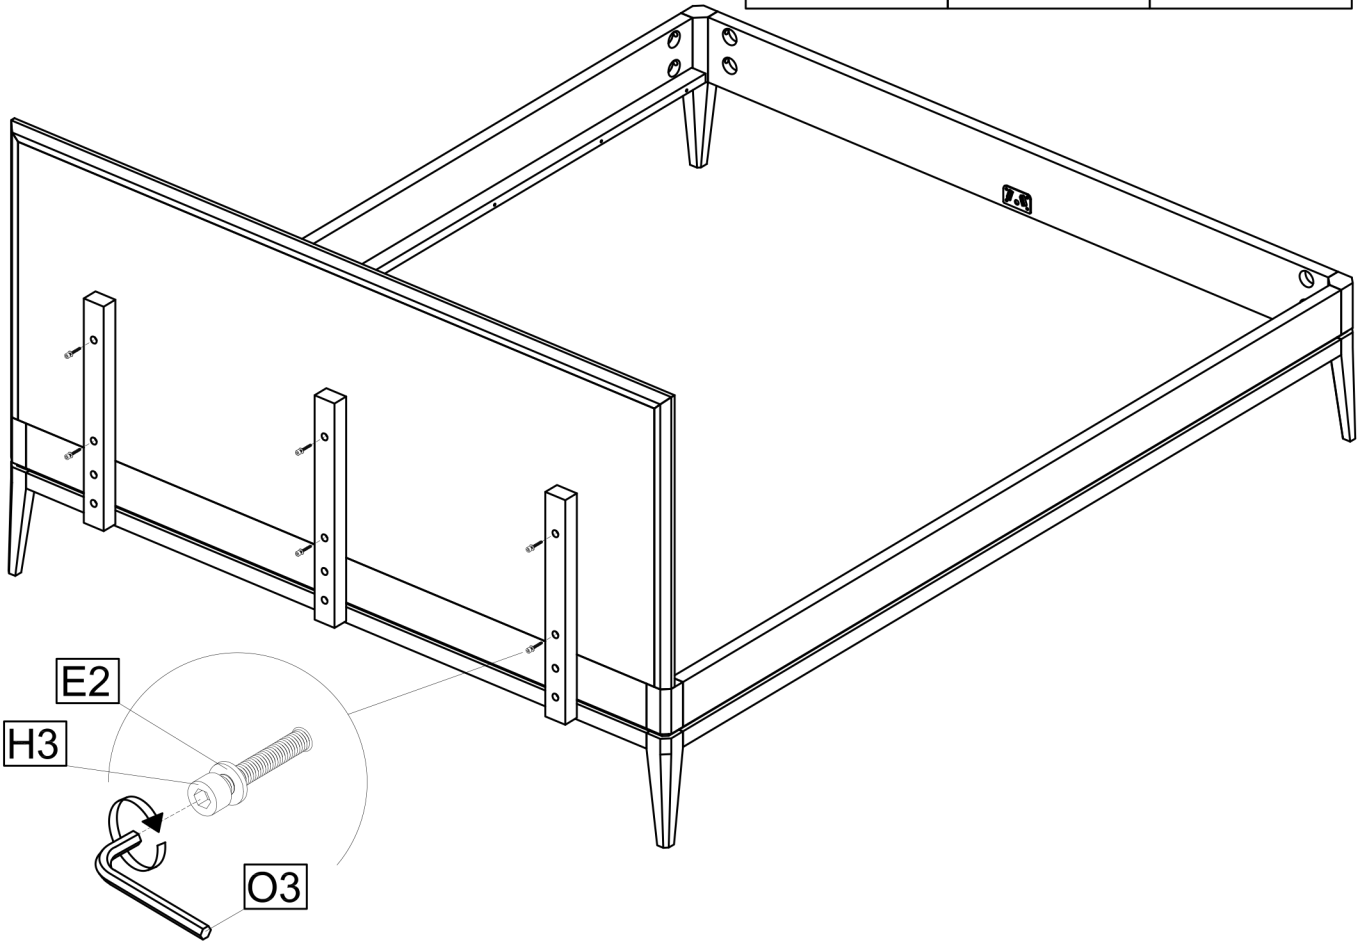


8

A1 x4

O1 x1

P2 x2



J2 x6

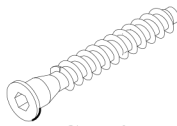




Ø7x50



k4 mm

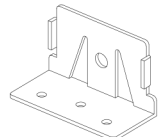

4x16

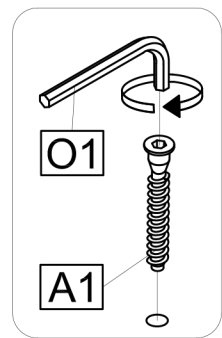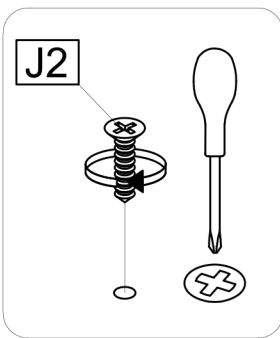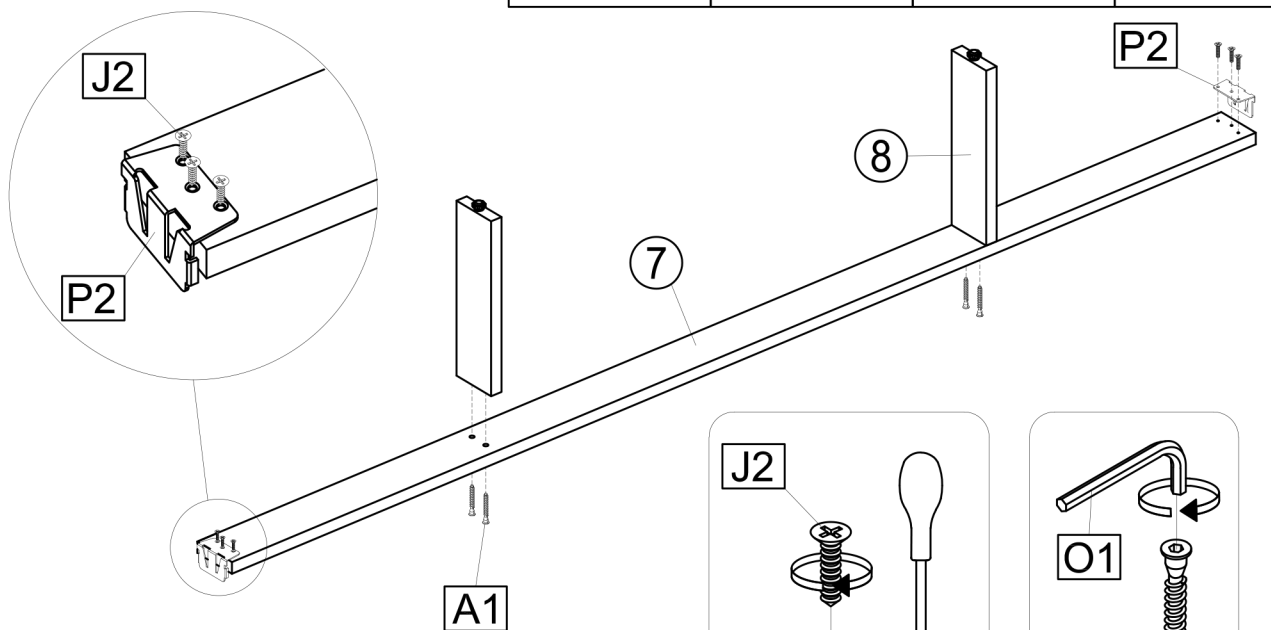

6

9

