
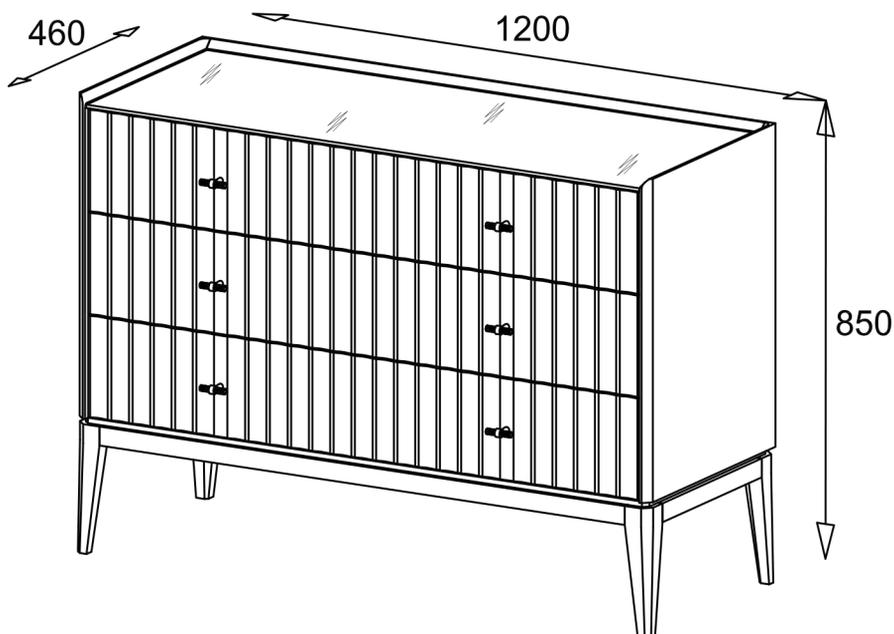
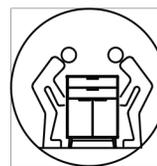


ИНСТРУКЦИЯ ПО СБОРКЕ

БРИСБЕН Комод 3

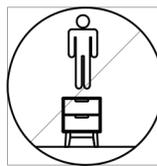

(GB) Assembly instructions

(IT) Istruzioni di montaggio

(PL) Instrukcja montażu

(SK) Návod na montáž

(RO) Instrucțiuni de montaj

(TR) Montaj talimatları

(D) Montageanleitung




(FR) Notice de montage

(NL) Handleiding voor de montage



(CZ) Montážní návod



(HU) Szerelési útmutató

(RU) Инструкция по монтажу

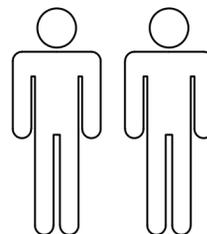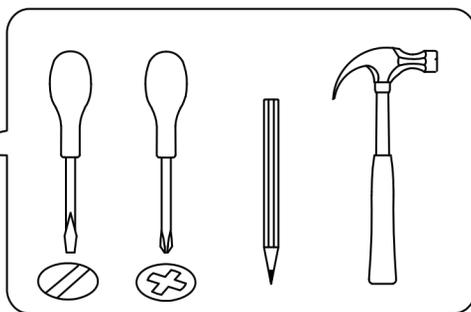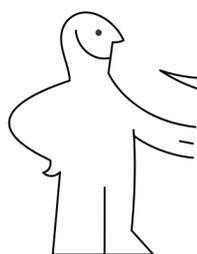


30 min

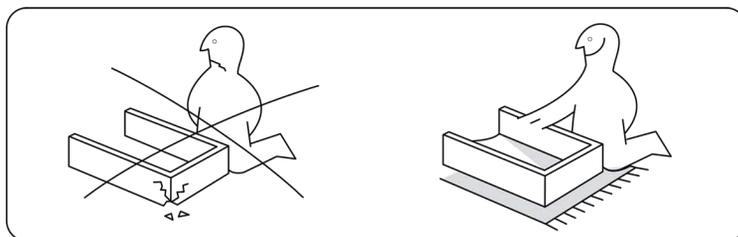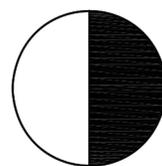


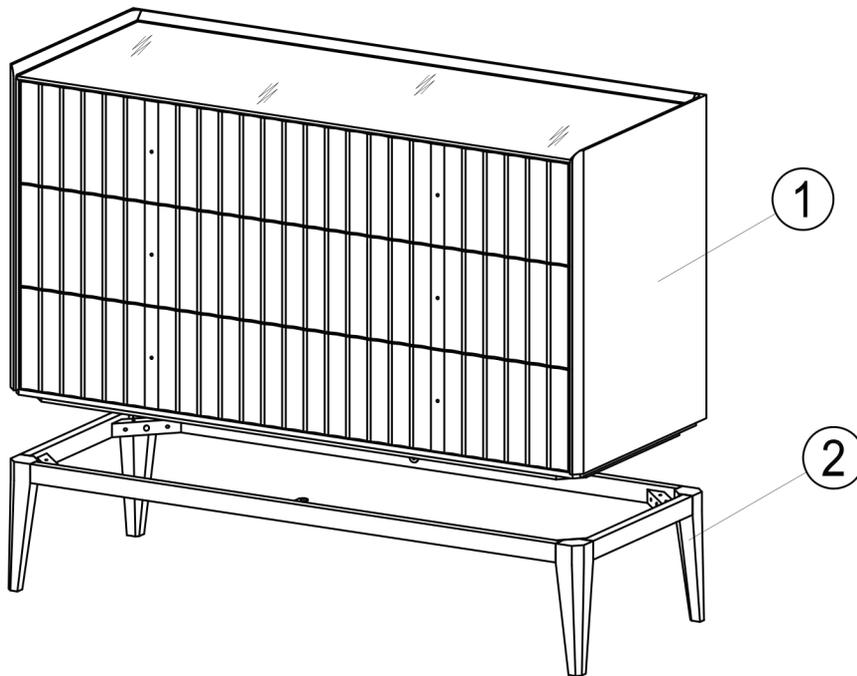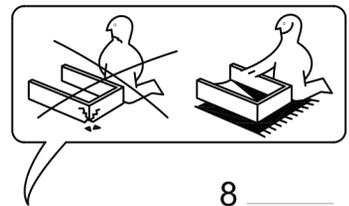


No	Size/MaB	Qty	✓
1	1200x460x620	1	
2	1200x460x240	1	

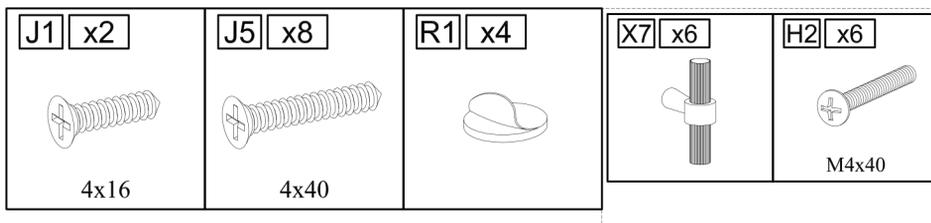

1

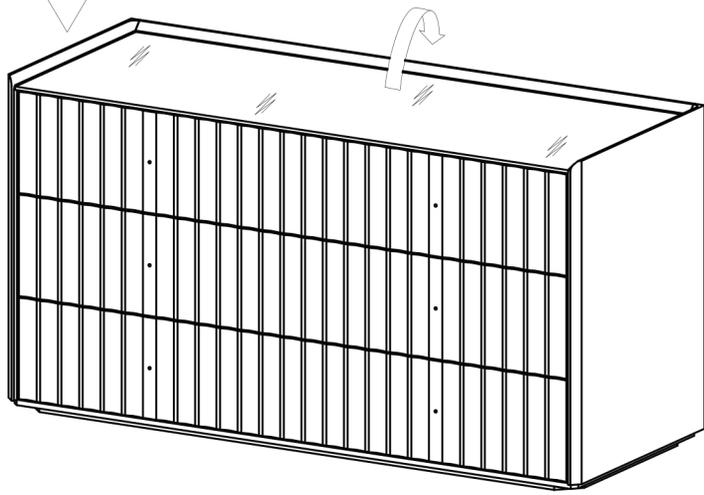

J1 x2	J5 x8	R1 x4
		
4x16	4x40	

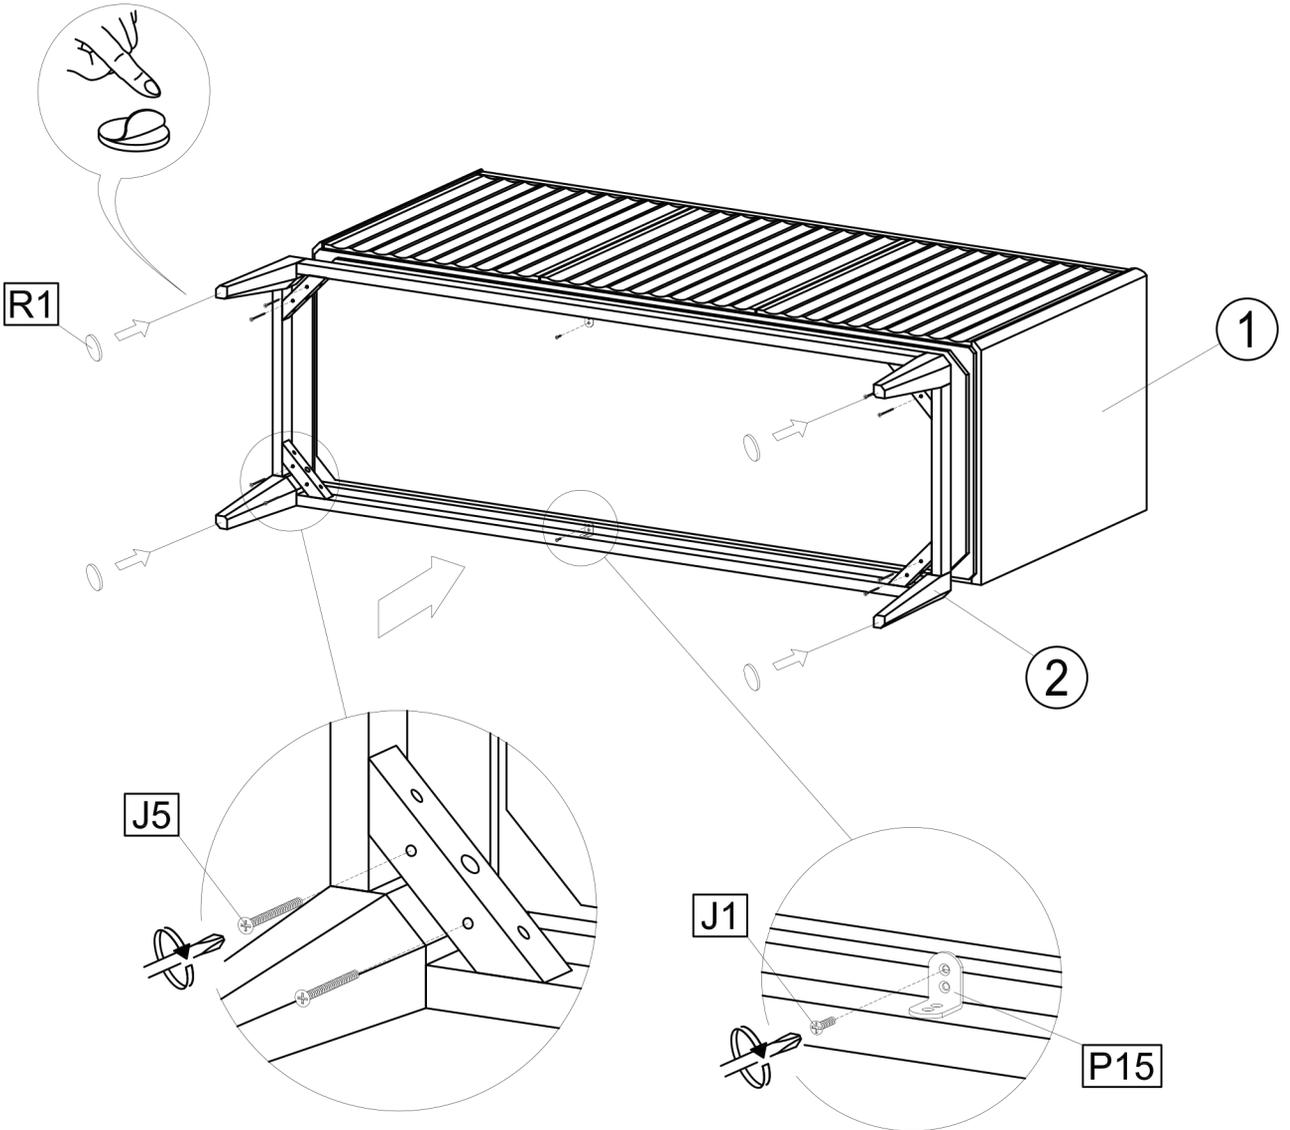

2

