


ИНСТРУКЦИЯ ПО СБОРКЕ

ВЕСТФОЛЛ зеркало напольное с ящиком

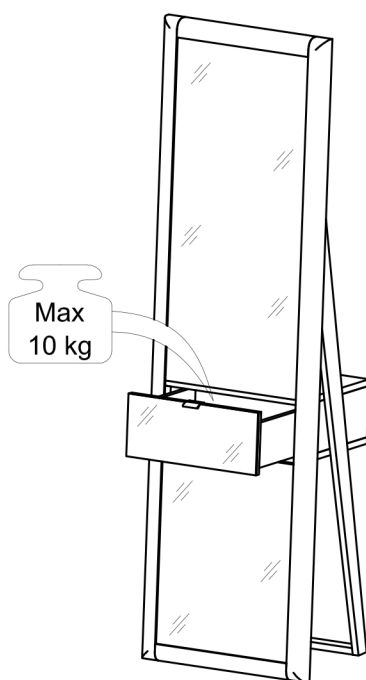


1950 мм

560 мм



471 мм


- (D) Montageanleitung
(FR) Notice de montage
(NL) Handleiding voor de montage
(CZ) Montážní návod
(HU) Szerelési útmutató
(TR) Montaj talimatları


- (GB) Assembly instructions
(IT) Istruzioni di montaggio
(PL) Instrukcja montażu
(SK) Návod na montáž
(RO) Instrucțiuni de montaj
(RU) Инструкция по монтажу

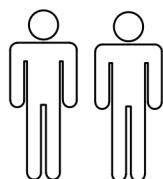



50 min







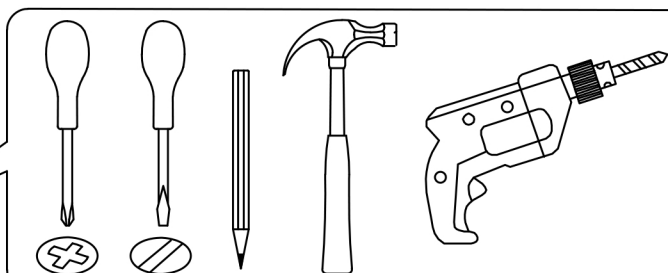
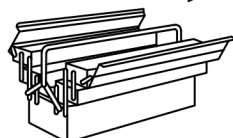


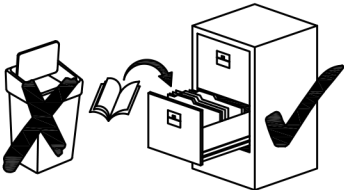Name • Nom • Nome • Naam • Nazwa • Jaméno • Názov • Név • Denumire • Isim • Название	
Nr. • No. • N° • Номер • Č • Sz	
Typ • Type • Tip • Tipus • Tipo • Тип	
	
	

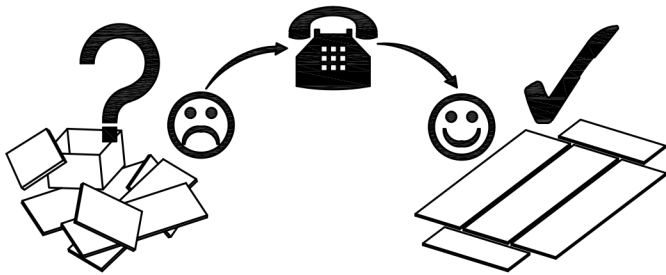


No	Size/MaB	Qty
1	1950x560x45	1
2	1500x84x20	1
3	1500x84x20	1
4	474x42x20	1
5	474x390x196	1
6	444x380x190	1

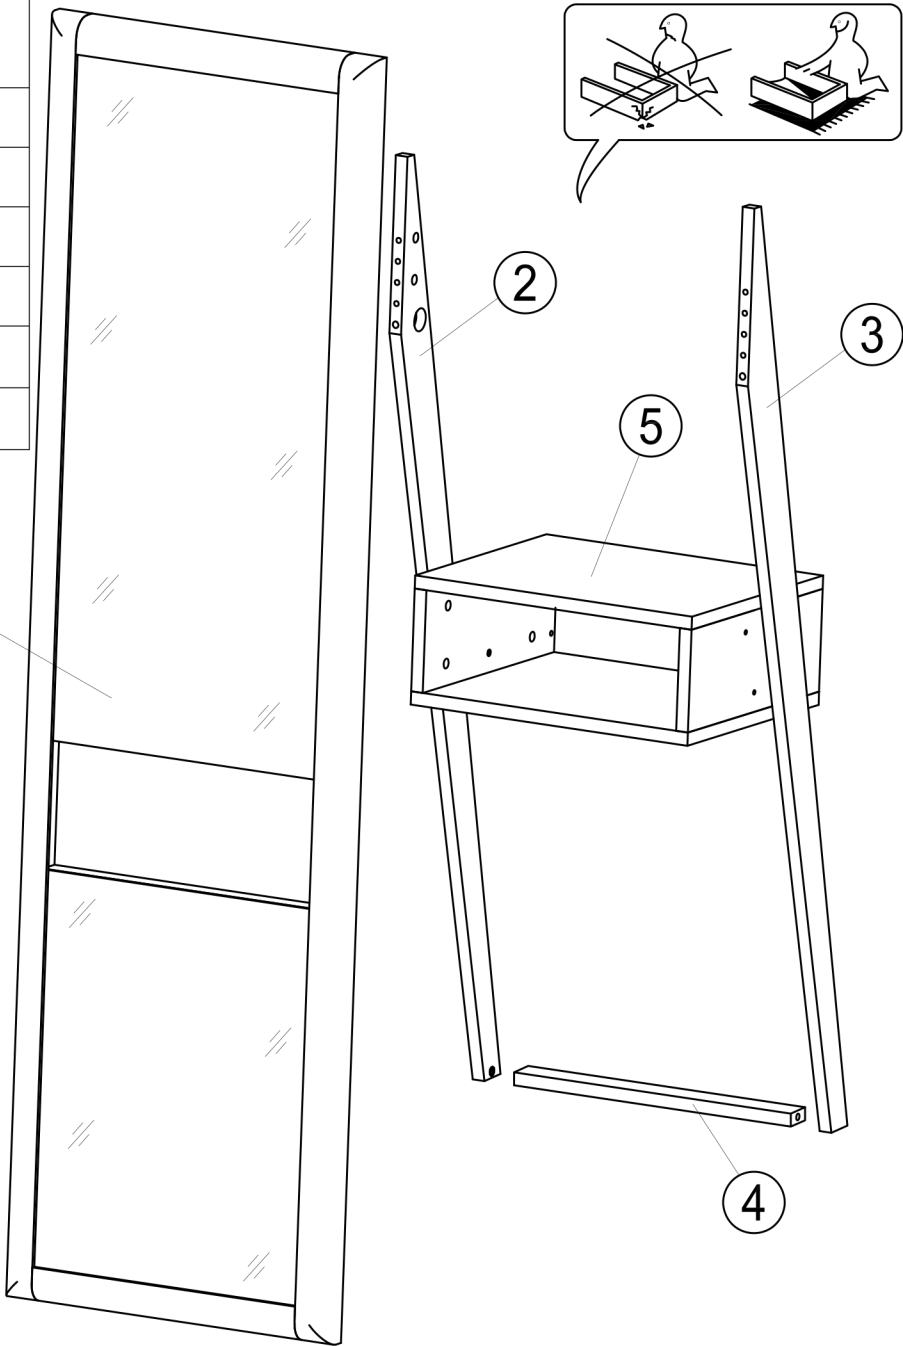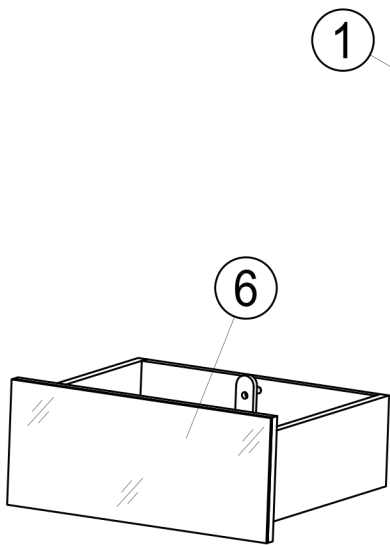

 B1 x4	 B3 x4	 C1 x4	 C3 x4	 K1 x4	 O2 x1
 H7 x4	 J2 x1	 X5 x1			
M6x30	4x16				

1

B3 x2




Ø9x58 M8x9.5

C3 x2




Ø35x15

C1 x4



Ø15

K1 x4



Ø8x35

B3

2

3

C1

C3

K1

2

C3 x2



Ø35x15

4




C3

3

O2 x1



k6 mm

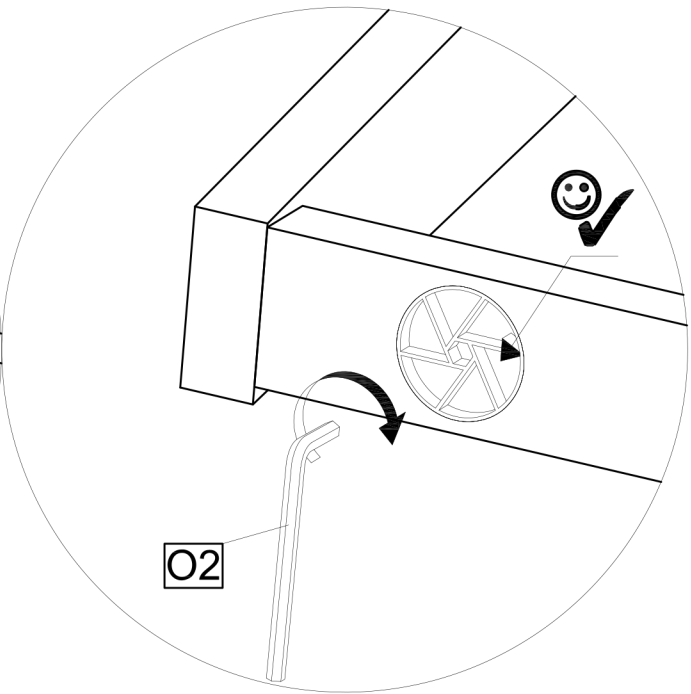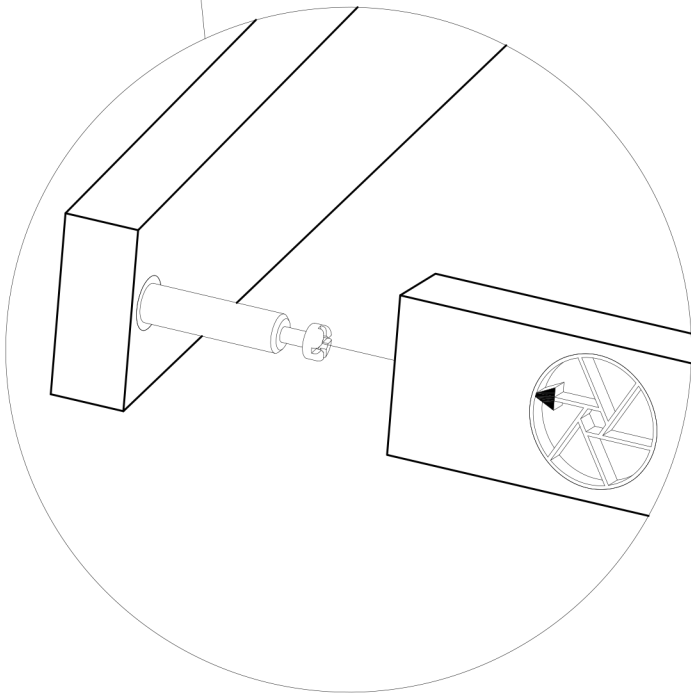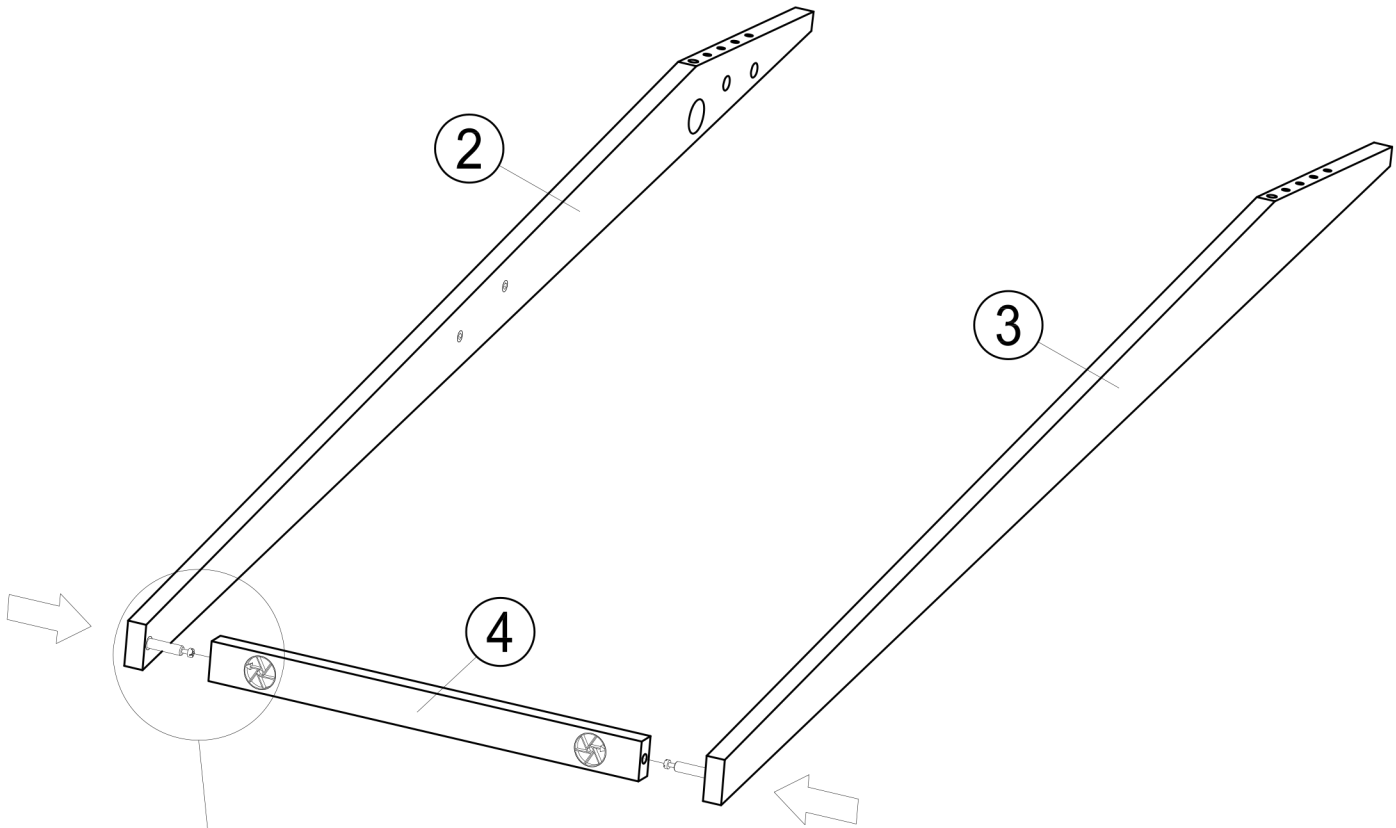


4

B1 x4

B3 x2


Ø9x58 M8x9.5

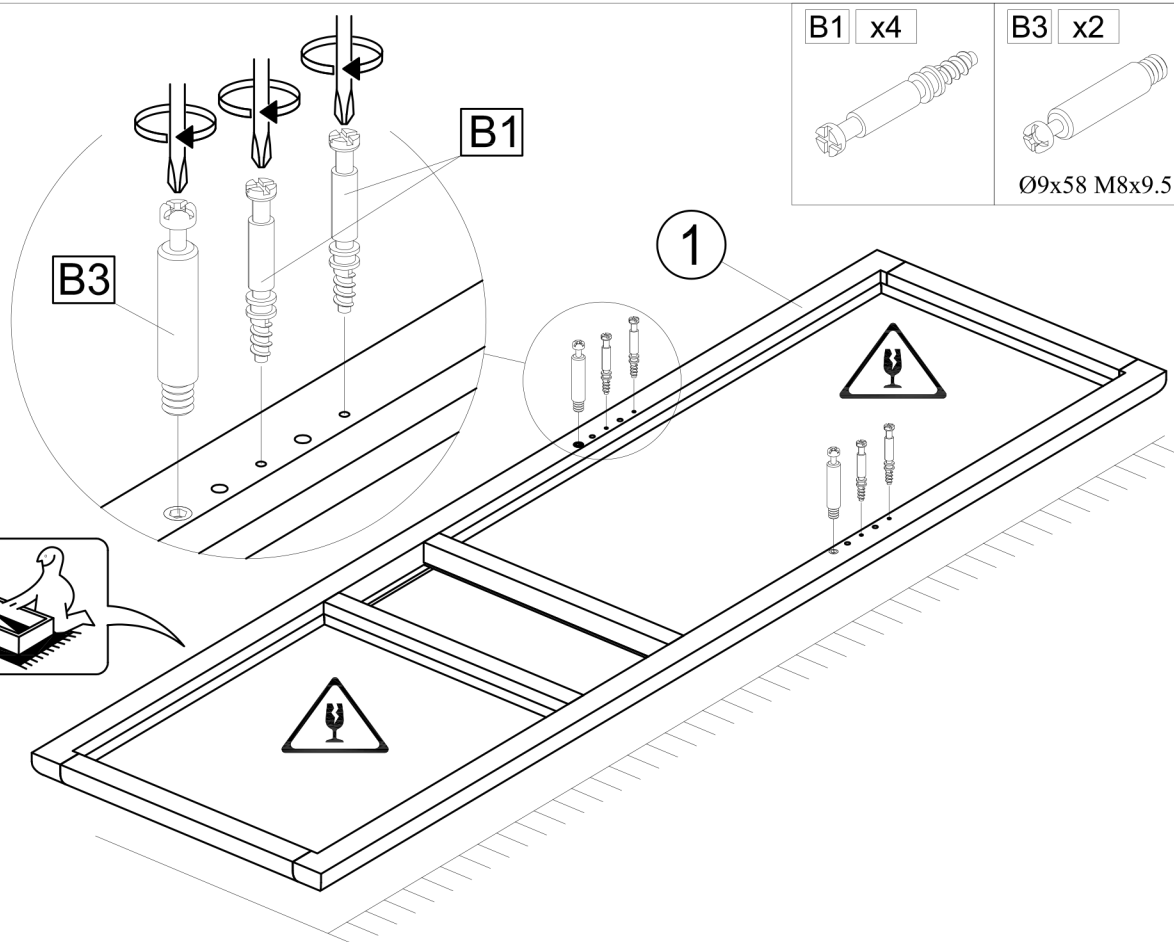


5

O2 x1

k6 mm

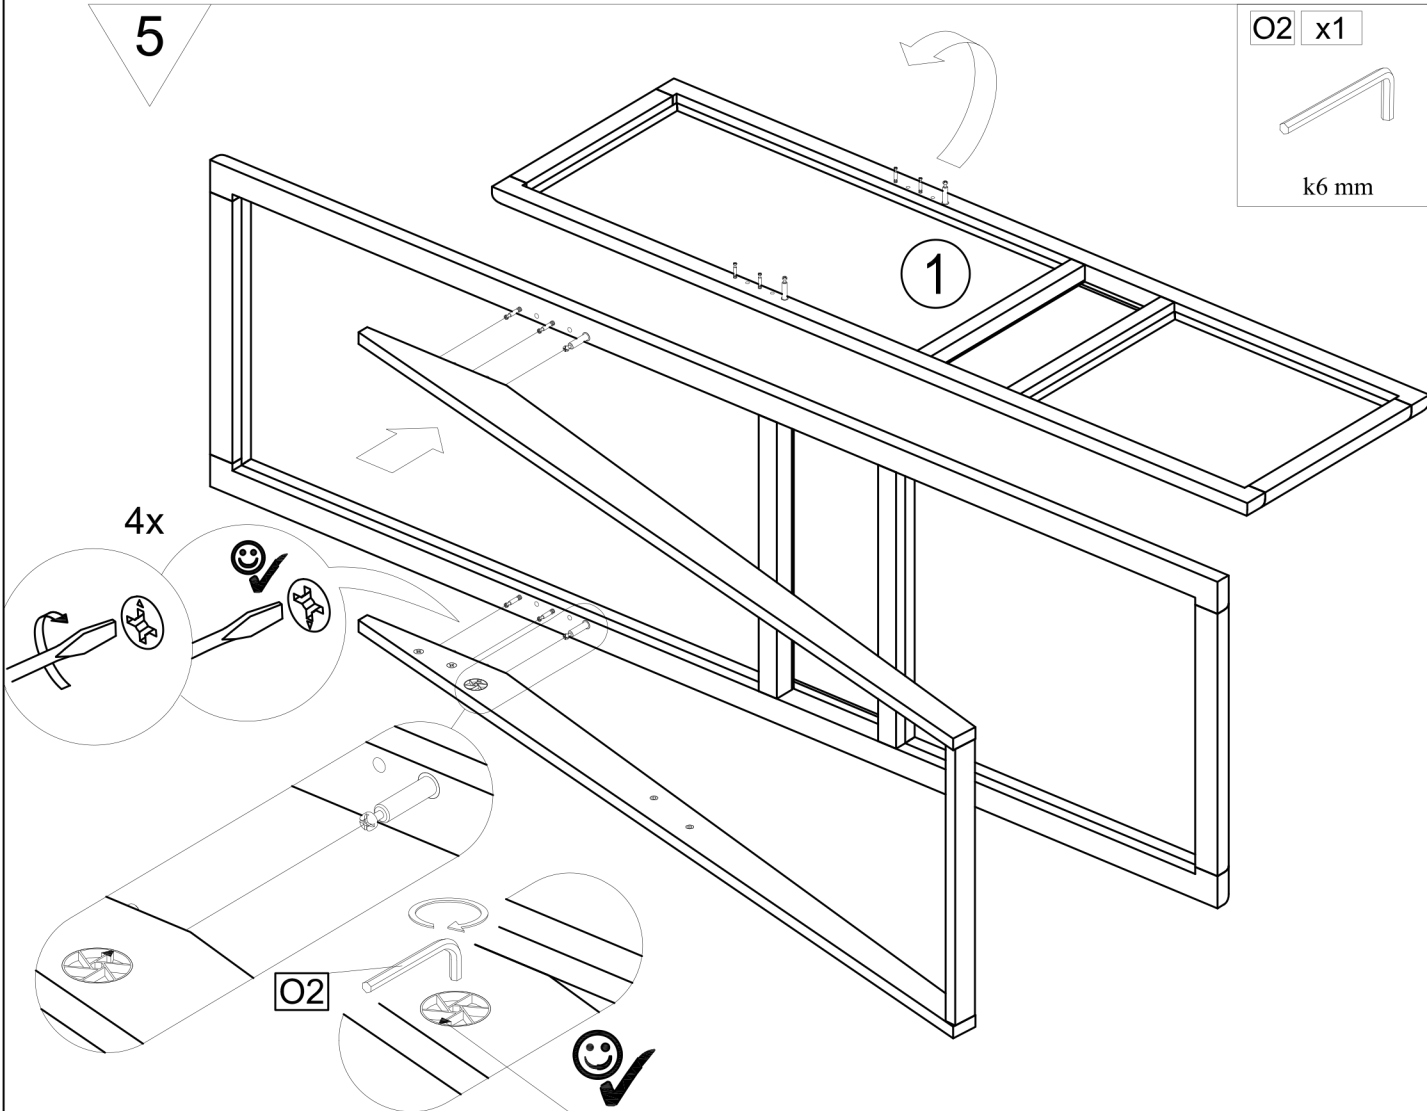


6


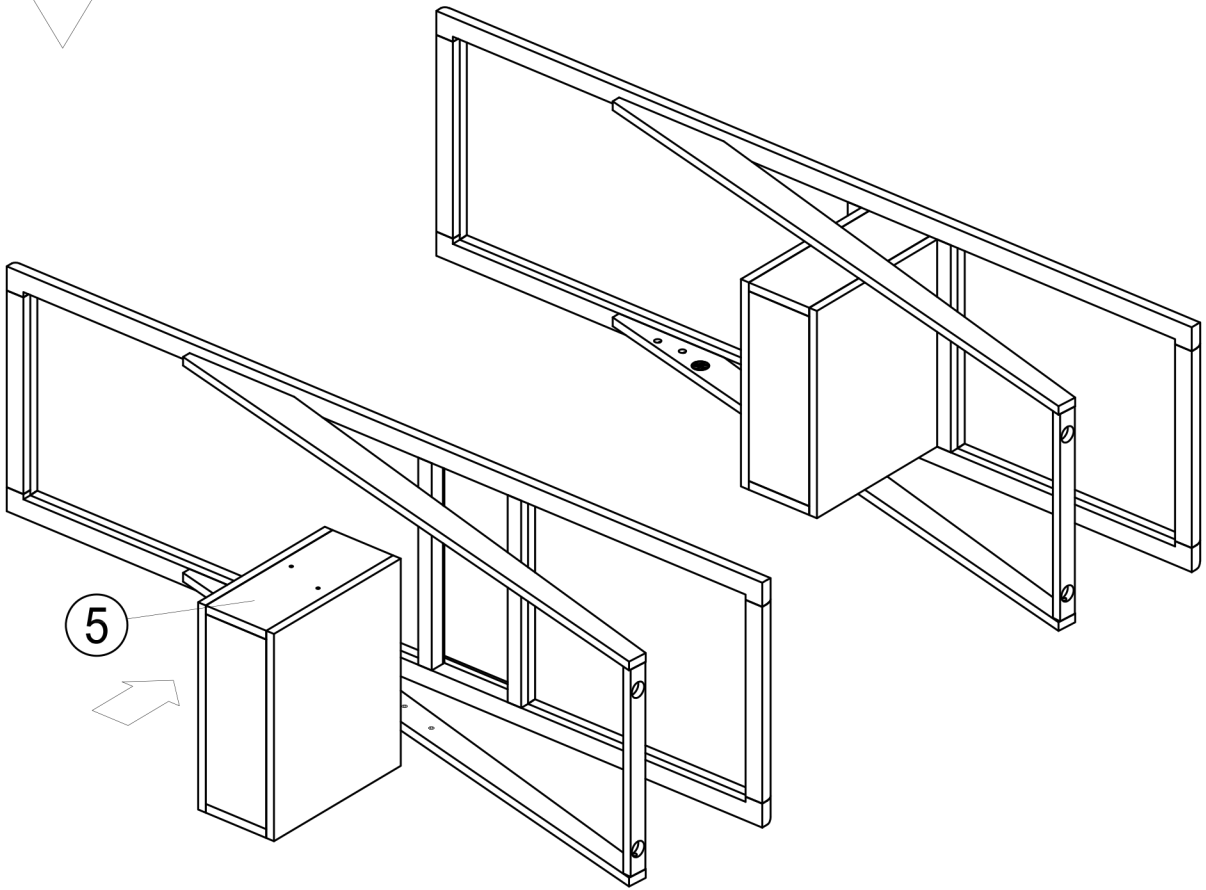




7

H7 x4




M6x30

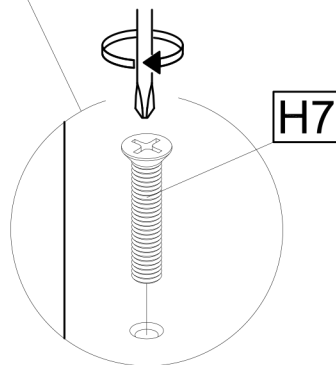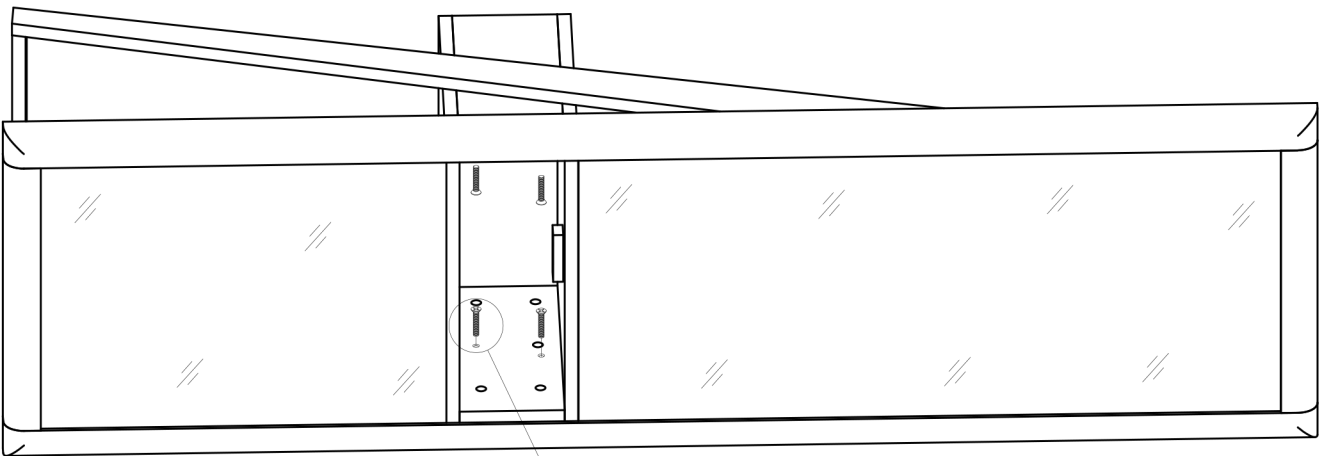

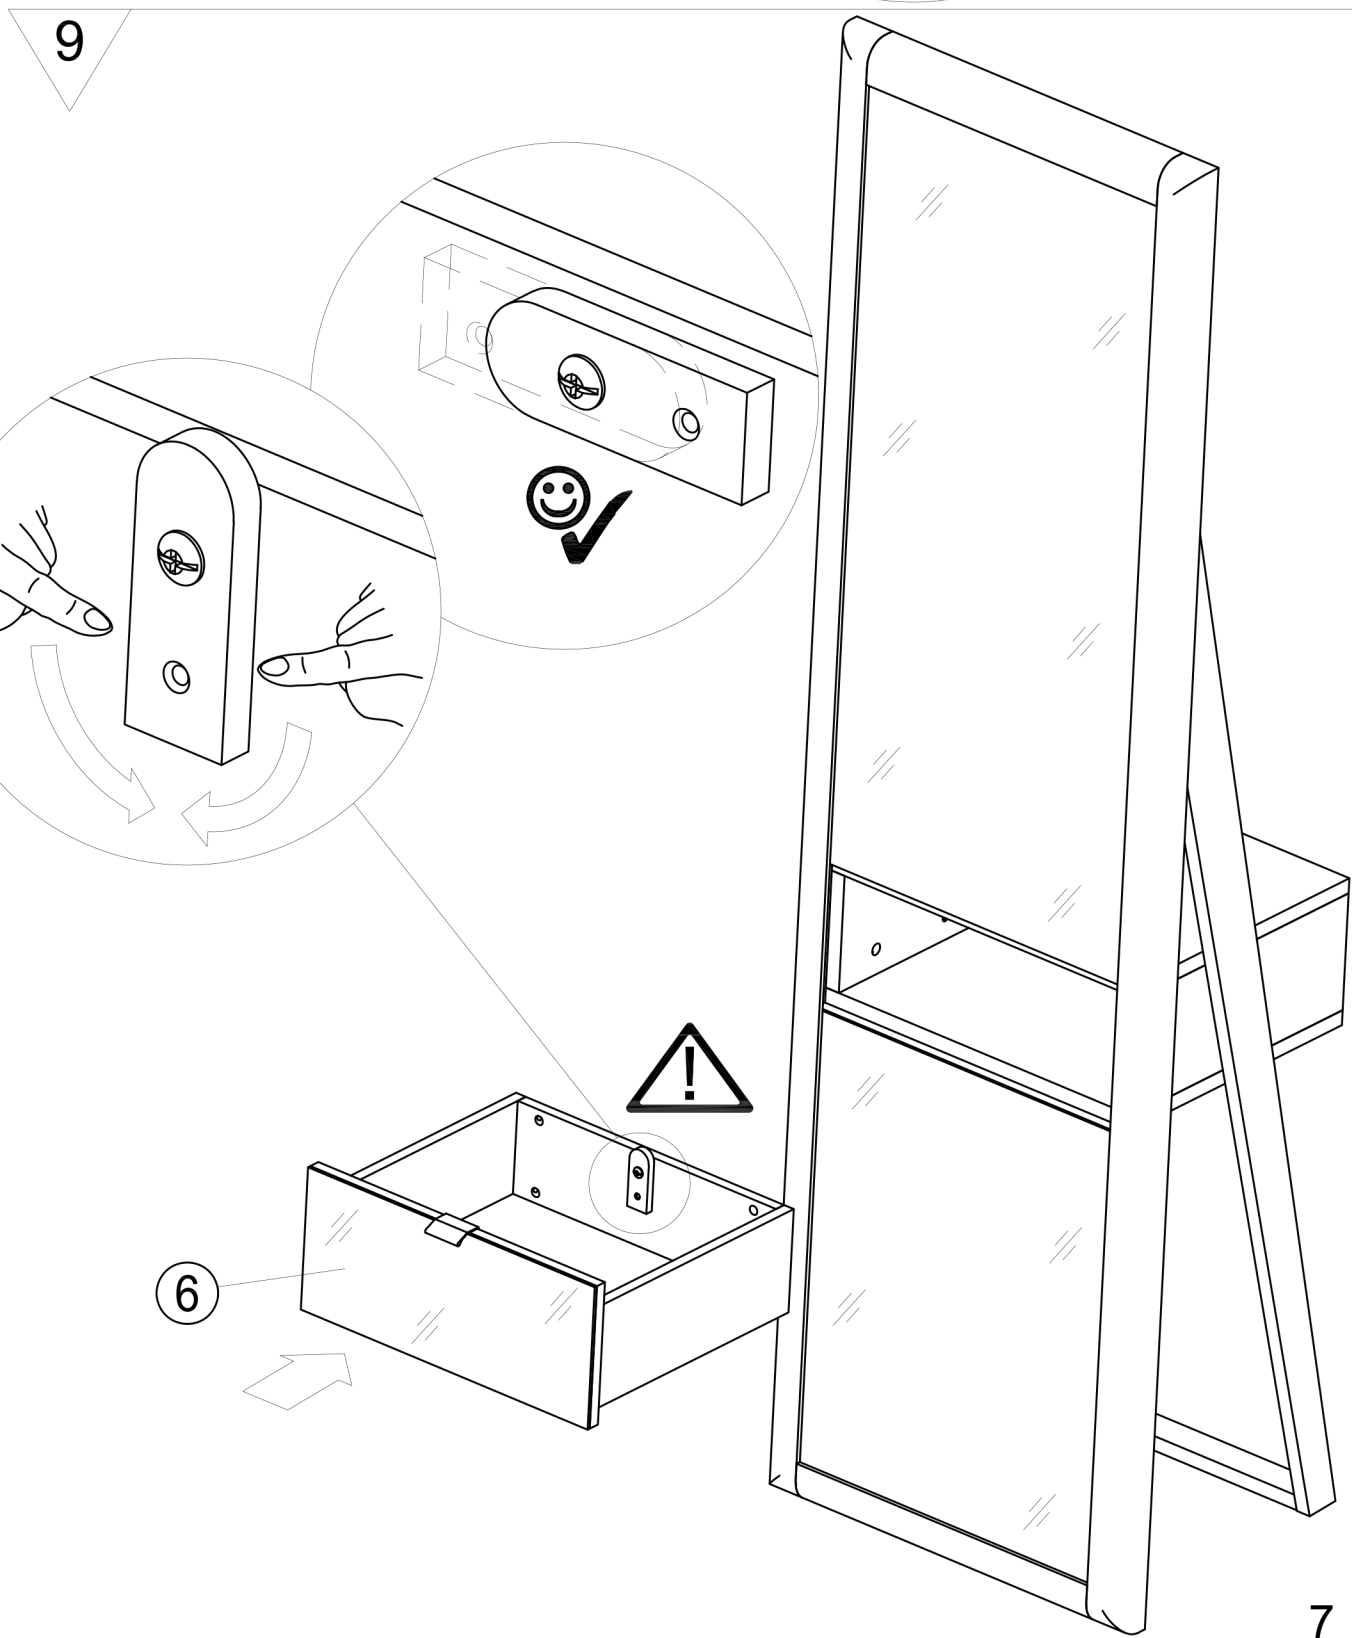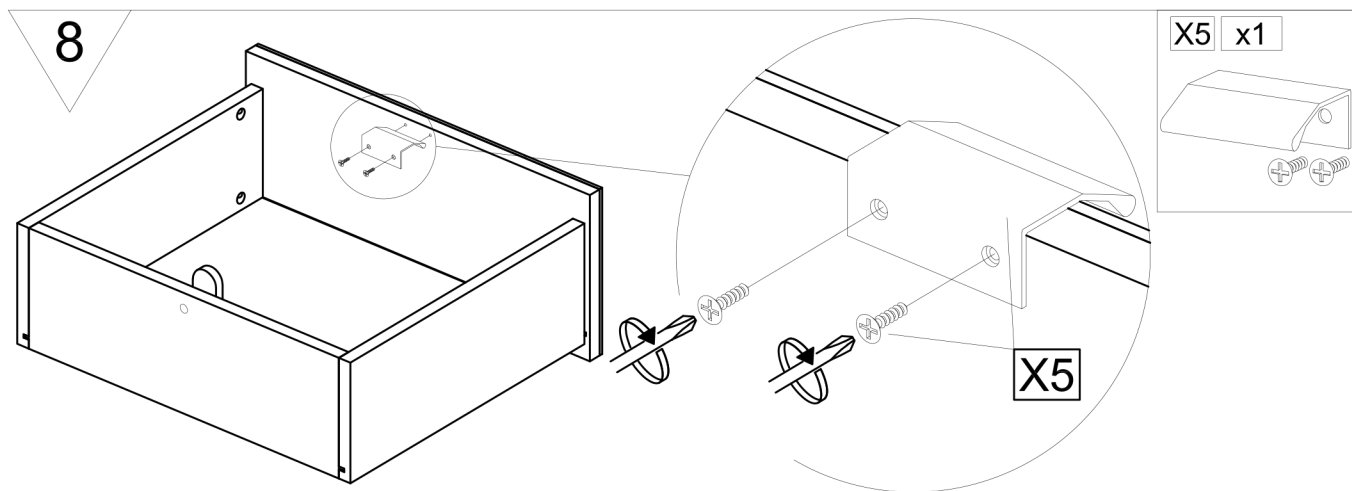

10

J2 x1



4x16

