



ИНСТРУКЦИЯ ПО СБОРКЕ

Стул Портленд **EAC**



STEP 1

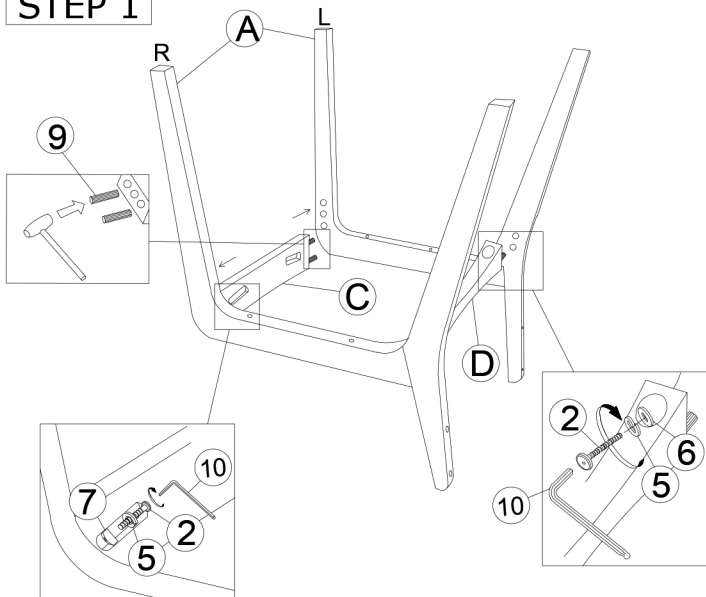

STEP 2

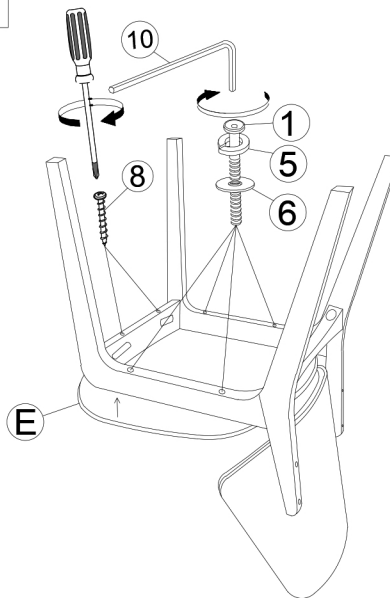

STEP 3

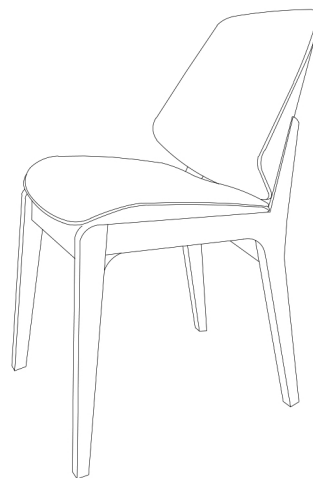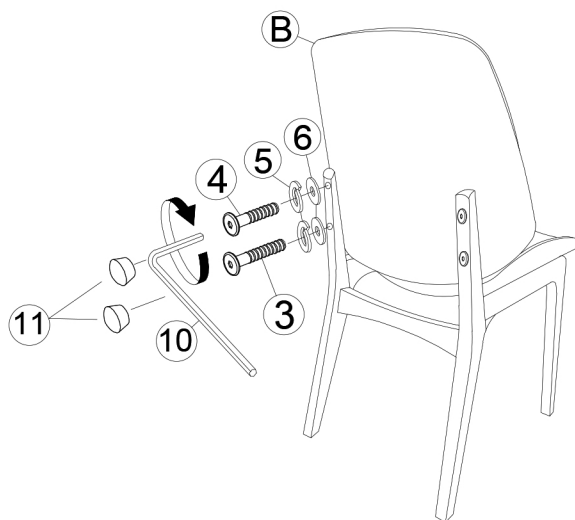

HARDWARE LIST

ITEM	DESCRIPTION	QTY
1	JCBC SCREW M6 X 60MM (RB)	4 PCS
2	JCBC SCREW M6 X 50MM (RB)	4 PCS
3	JCBC SCREW M6 X 30MM (RB)	2 PCS
4	JCBC SCREW M6 X 25MM (RB)	2 PCS
5	SPRING WASHER 5/16" (RB)	12 PCS
6	FLAT WASHER 6 X 13MM (RB)	10 PCS
7	SCREW PIN	2 PCS
8	PH 5 X 32MM (BLK)	2 PCS
9	WOOD DOWEL 10 X 30MM	4 PCS
10	ALLEN KEY M4 (BALL SHAPE)	1 PC
11	WOOD BUTTON	4 PCS

PART LIST

ITEM	DESCRIPTION	QTY
A	CHAIR LEG (L&R)	2 PCS
B	CHAIR BACK	1 PC
C	FRONT RAIL	1 PC
D	BACK RAIL	1 PC
E	CHAIR SEAT	1 PC